

ImagineWorldClient Central Manage Software

User Manual

(Revision-1)

Contents

1.0 IMAGINEWORLDCLIENT FUNCTIONS	5
2.0 INSTALL IMAGINEWORLDCLIENT	6
3.0 START IMAGINEWORLDCLIENT.....	7
3.1. Top Toolbar	8
3.2 Top Menu Bar	9
3.3 Toolbar on Left Side	9
3.4 Video Area	10
3.5 Bottom Toolbar	12
4.0 MENU AND MOUSE OPERATION.....	12
4.1 File.....	12
4.2 Operation	13
4.3 Parameter configuration	14
4.4 Help.....	16
4.5 Mouse Operation	16
5.0 REAL-TIME VIDEO DISPLAY AND CONTROL.....	16
5.1 Real-Time Video Frame Control	16
5.1.1 Displaying Mode Switching	16
5.1.2 Single Frame Displaying	17
5.1.3 Full Screen Displaying	17
5.1.4 Polling Monitoring	17
5.2 Pan/tilt Controlling.....	19
5.3 Camera Assignment.....	19
6.0 LOCAL RETRIEVAL AND RECORD PLAYBACK	23
6.1 Record Retrieval.....	23

6.2 File Download	24
6.3 Record Playback.....	25
7.0 ALARM MANAGEMENT	26
8.0 AUDIO MONITORING AND BIDIRECTIONAL TALKBACK	26
9.0 ELECTRONIC MAP	27
9.1 Create Electronic Map	27
9.2 Alarm Linkage and Electronic Map.....	29
10.0 CLIENT-END SYSTEM PARAMETER SETTING	30
10.1 System Parameter.....	30
10.2 System User	31
10.3 File Service	32
10.4 Setting of Transmission Server	33
10.5 Record Hard Disk Management.....	34
10.6 Software Setting.....	35
10.7 Local Linkage.....	36
10.8 Other Setting	37
11.0 CONFIGURING PARAMETER SETTING OF VIDEO SERVER	38
11.1 Equipment Parameter Setting	39
11.1.1 Basic Parameter	39
11.1.2 Network Parameter	40
11.1.3 Wireless Network	40
11.1.4 System User.....	41
11.1.5 Save-Reboot-Upgrade	41
11.2 Channel Parameter Setting.....	42
11.2.1 Compression Parameter	42
11.2.2 Motion Detection	44
11.2.3 OSD Overlap	45
11.2.4 Equipment Recording Plan.....	45
11.2.5 Video Parameter Adjustment	46

11.2.6 Image Area Masking.....	47
11.2.7 Image Covered Detection.....	47
11.2.8 Video Loss Detection	48
11.2.9 JPEG Capture Parameter.....	49
11.3 Pan/tilt Parameter Setting.....	49
11.4 Alarm Probe Parameter Setting	50
11.5 Equipment Hard Disk	51

ImagineWorldClient central manage software is an integrated network monitoring manage software, which can run independently and manage all video server and IP camera, monitor video and control pan/tilt, etc. It is applicable management platform for medium and relatively large network video monitoring.

1.0 ImagineWorldClient Functions

ImagineWorldClient can mainly realize following functions:

Real-time video display: it can display real-time video images of 1-16 channels one page within monitoring network. It can realize single frame, 4-frame, 6-frame, 8-frame, 9-frame, 16-frame partition display. Also it can support polling display.

Pan/tilt controlling: within authorized range, the orientation, pitching angle and focus of the camera can be changed by the control of front end pan/tilt and lens

Remote Video Recording: video file can be stored in build-in hard disk of front-end video server or storage device with USB interface.

Local video recording: video recording can be achieved automatically by setting recording time or by alarm signal received from video server.

Real-time video image capture: it is auxiliary function for real-time monitoring. It will save the single frame from dynamic images in BMP format, and it can capture images during monitoring or playback.

Image capture of video server: it refers to direct capture by the front-end video server. And its format for capturing is D1 in JPEG format. The image quality will not be affected by network transmission.

Audio monitoring and Bidirectional talkback: bi-directional audio transmission can be achieved between client-side and front-end devices. Client-side can monitor the audio of front-end device; meanwhile, client-side can also transmit audio to front-end device and realize real-time bidirectional talkback.

Alarm action: client-side will start recording, display electronic map and real-time recording according to settings after receiving alarm signals from front-end device.

Electronic map display: electronic map contains name of the scene under monitoring and corresponding front-end devices in it. Click the icons of front-end video devices distributed in the map, and then the real-time image of the devices will be displayed.

Local playback: video files of devices at any time in the recording can be retrieved and replayed.

Remote playback: to retrieve, replay and download the recording files in front-end device or other recording files in ImagineWorldClient.

2.0 Install ImagineWorldClient

★ Operating Environment:


Operating system: Windows 2000server/professional/XP/2003server

Network protocol: TCP/IP


Client-side PC: P4/128MRAM/40GHD/ video card supporting zoom, DirectX7.0 or above.

★ Installation Guide:

Open folders of management software and run (double click left button of the mouse) "ImagineWorldClientClientSetup_V1.00.00.46.exe", and then the following dialogue box will appear:

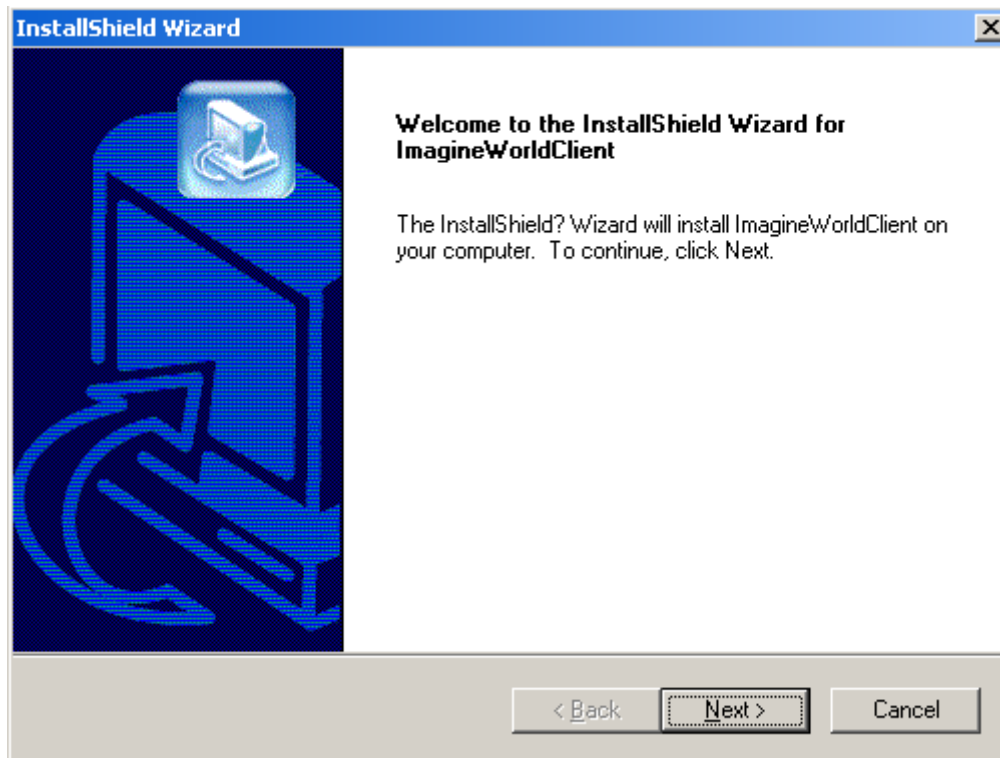


Next, follow the prompt of installation tool until the appearance of the step displayed as following. Click **[Finish]** to complete the installation.

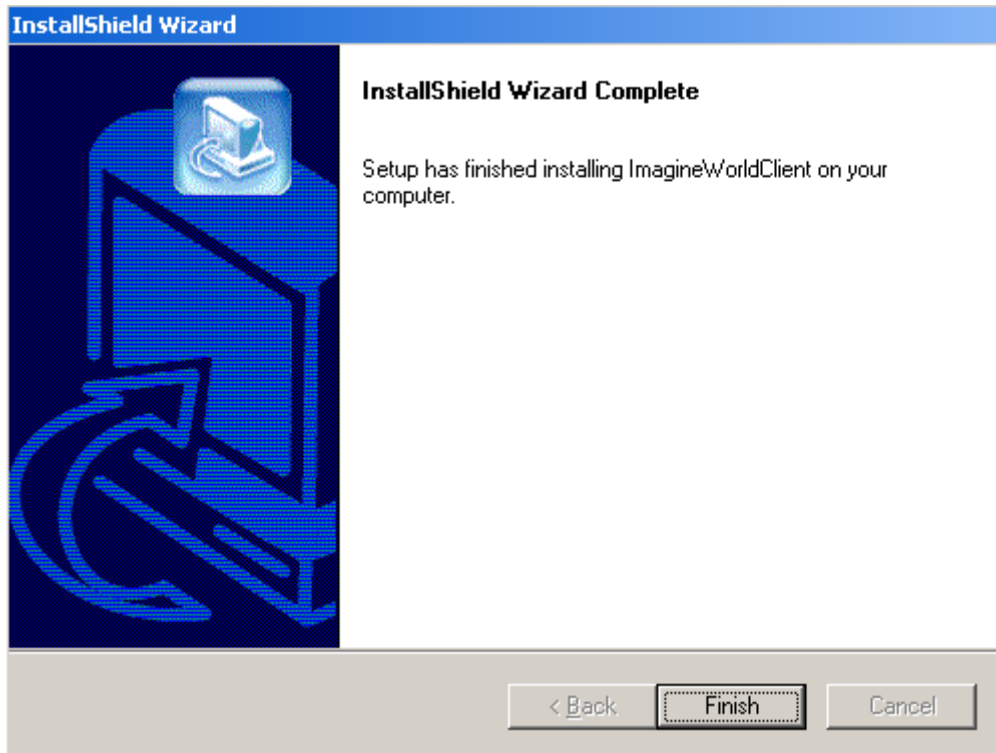


3.0 Start ImagineWorldClient

Choose the software in [Start] menu---- program groups----ImagineworldClient, which is showed as following:

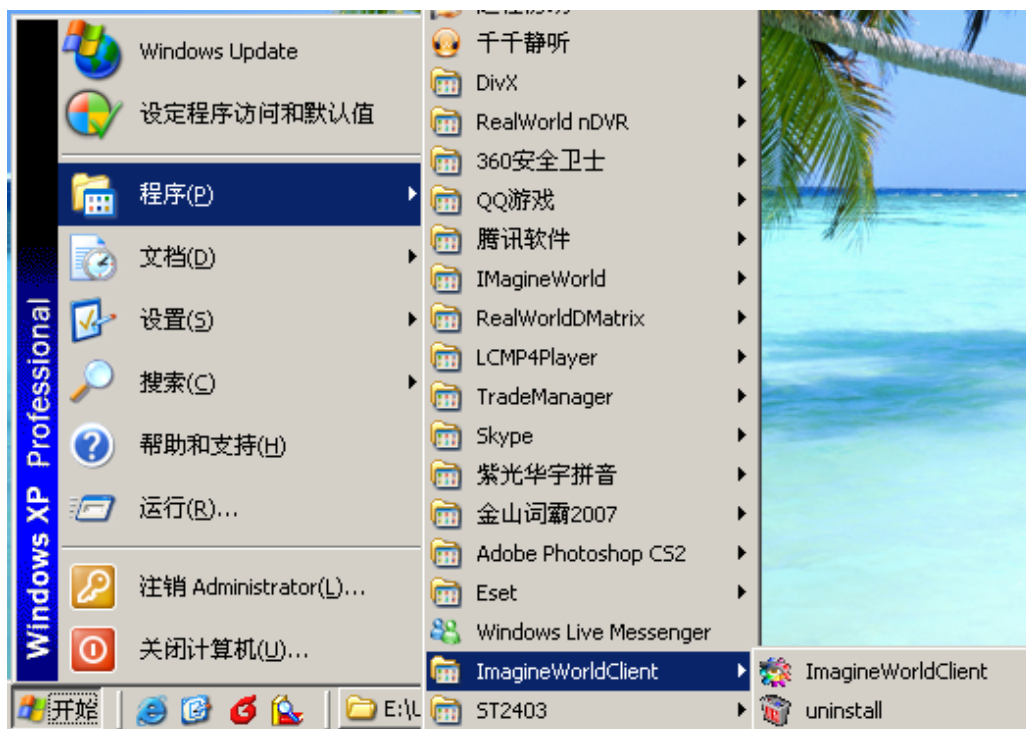


Run ImagineWorldClient by clicking the left button of the mouse, and dialogue box as following will appear:

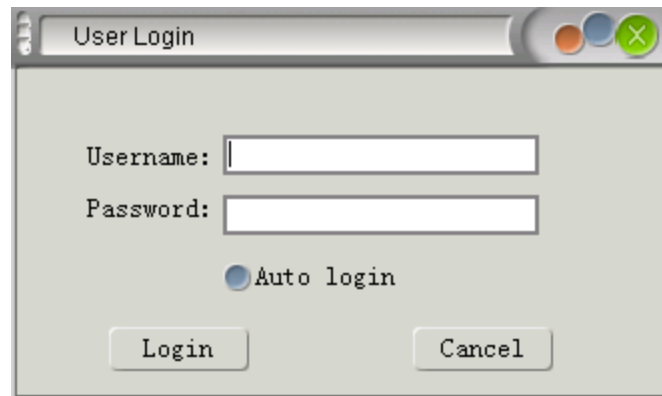

Input user's name into "Username" frame for login and password into "Password" Frame (for initial installation the uses' name is "admin" and the password is NULL). Click [OK], the main user interface will appear as follows.

If 'Automatic Login Next Time' was selected, the [User Affirm] dialogue box won't be displayed next time and will enter the main user interface directly.

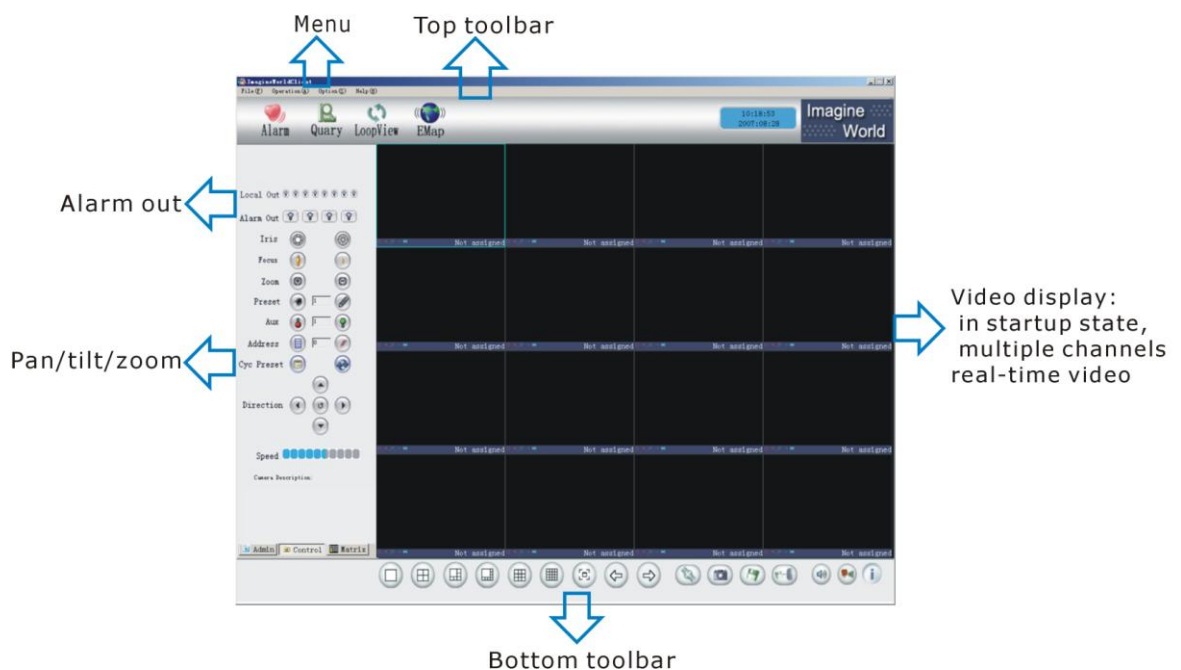

3.1. Top Toolbar

You can manually choose different shortcuts as following picture:



【Alarm】 : After entering, everyday login, alarm, connection, external connection, and abnormal exit log can be viewed in system log.


【Data Enquiry】 :After entering, you can choose one or many video servers and defined period to retrieve recorded video files in local or front-end server or the record file in the server and replay.

【LoopView】 : Images connected to server can be displayed by turns after the configuration of polling monitoring parameters has been configed.

【Electronic Map】 : View and edit electronic map which has been created.

3.2 Top Menu Bar

In top menu bar, there are four menu items such as File, Operation, Option, and Help. They include the main functions of setting and manipulation in this software. It's showed as follows:

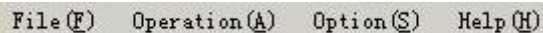

3.3 Toolbar on Left Side

【Local Out】 : It is used to display and control the connection or disconnection of alarm output relay in external alarm box of computer host. If the alarm output relay engaged, then the output indicator would be lighted up. Vice versa, clicking and light this indicator up will activate alarm output.


As follows:



【Alarm Out】 : Indicator for alarm output status. The output indicator would light up if alarm output relay engaged. Also you can click the lindicator to light it up; this will also activate the alarm output.



Pan/tilt control button:

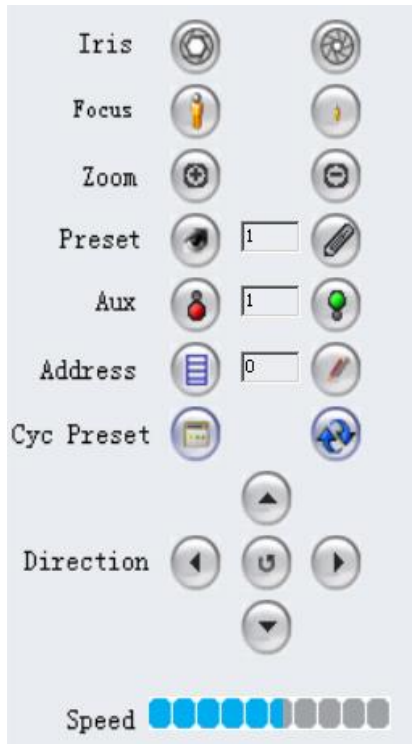

3.4 Video Area

Choose the real-time video of one channel in video display area, and click right button on selected video screen. System pops up a menu as follows:



According to the menu, operations can be done such as start or stop previewing, connecting or disconnecting camera, local or remote recording, jpg image capture, temporary alarm defense organization or remove, and camera setting, etc.

Delect Window: delect the allocation of a certain channel of a certain video server on video window.

Play or stop the camera: you can choose whether connect the software to server. If choosing to disconnect with the server, all video and information of the equipment cannot be displayed.

Start or stop previewing: you can choose whether display the image of video server connected by this video window. When the preview is stopped, computer still keep connected with video server, no image is transmitted. It saves resource.

Local recording: you can choose start or stop local recording.

Remote recording: you can choose start or stop remote recording.

Local BMP capture: this is a real-time video capture function, which is to save single-frame images from dynamic images in BMP format under appointed folder of local monitoring host. The path of save can be modified in 'Option' menu—'system setup'.

Remote JPEG capture: this is a real-time video capture function, which saves single-frame images from dynamic images in JPEG format under appointed folder of built-in hard disk of video server.

Start local JPEG capture: this is to start the local JPEG format image capture. Choosing it will activate two options, 'Local JPEG capture single' and 'stop local JPEG capture single'.

Local JPEG capture single: this is a real-time video capture function, which saves single-frame images from dynamic images in JPEG format under appointed folder of local monitoring host. The path of save can be modified in 'Option' menu—'system setup'.


Stop local JPEG capture: this is to stop the local JPEG format image capture.

Disable Alarm: temporarily cancel the alarm defense setting of a certain channel of a certain video server.

Enable Alarm: it's a corresponding setting option to temporary defense remove. It let the alarm defense start.

Camera Parameter: all parameters of the camera can be set here. No right to set the parameters of the server if you log in as users instead of administrator. And the dialogue box cannot be opened, either.

3.5 Bottom Toolbar

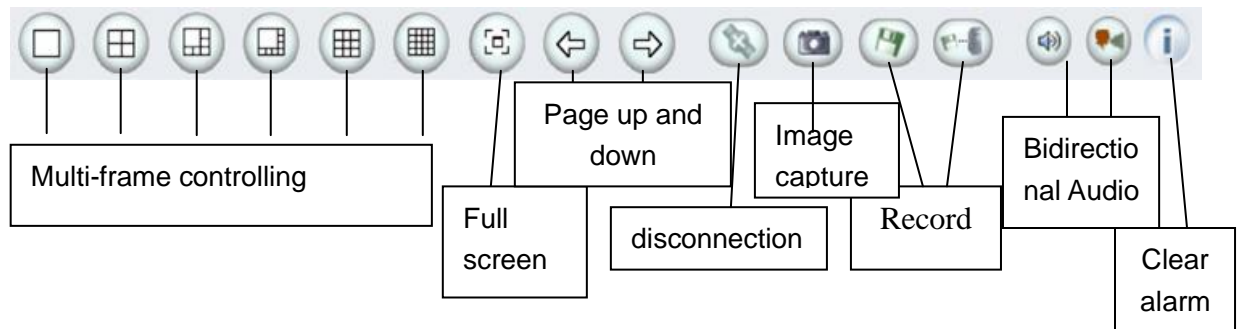

【Multi-frame controlling】 : 1-frame, 4-frame, 6-frame, 8-frame, 9-frame, 16-frame

【Full screen】 : Video image displayed on the screen will be maximized

【Page up and down】 page up and down to monitor more channels

【Disconnection】 : Connection between current channel and server can be cut off

【Image capture】 : Instant image of current channel can be captured

【Record】 : Choose to record files to local computer or remote video server

【Bidirectional Audio】 : Start or stop playing the Bidirectional Audio


【Clear alarm】 : clear the alarm notification

4.0 Menu and Mouse Operation

ImagineWorldClient is composed of four parts: Files, Operation, Option and Help.

4.1 File

By “File” menu of ImagineWorldClient operations like “Lock/Unlock Screen”, “Save Current Status”, “System Login” and “Exit” can be carried out. Picture showed as following:

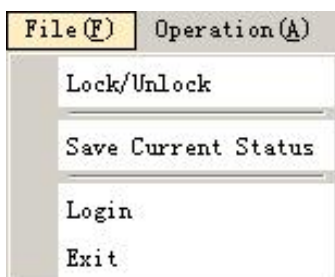

Lock/Unlock screen: system will require to input user’s name and password after clicking this button. No operations can be done, but relative setting like alarm

recording, etc. will not be locked. Click again and the status will be unlocked after typing in the user's name and password.


Save current status: save current status so that the software will continue to work the same as current status at next starting.

System login: log in the client side of ImagineWorldClient. (for initial installation the users' name is "admin" and the password is NULL)


Exit: exit ImagineWorldClient program.

4.2 Operation

"Operation" menu is mainly used to enquire historical video files, view system log, edit and use electronic map, and polling monitoring for selected channel. Showing as following picture:

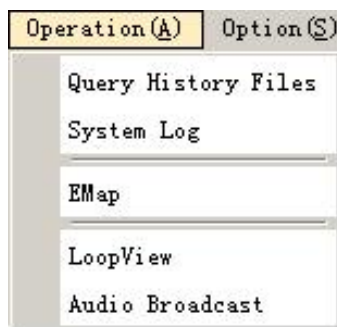

Query history files: mainly used to control real-time video and recording files in

center. It can also be achieved by clicking "Quary" button  in the top toolbar and the function is the same.

System log: status information, application program starting and operation information of the server are kept in system log.

It is equal with the function of 'alarm' button  on top Toolbar.

Electronic map: view and edit built-in electronic map. It is equal with the function of

'Emap' button  on top Toolbar.

Loop view: images connected to server can be displayed by turns when configuration of polling monitoring parameters is accomplished. It is equal with the function of

'LoopView' button  on top Toolbar.


Audio Broadcast: edit the list of audio broadcast so that video server sides in the list can receive audio information from the manage host computer side.

4.3 Option

“Option” menu is mainly used to realize the functions like setting system parameters, server assignment, setting loop view parameters, editing electronic map, setting the parameters of remote server, local parameter setting, import and export system parameters, etc.



System setup: local setting, including system parameter, system user, file service, redirection setting, record disk, software parameter, local linkage, other setting, etc. Showing as following picture:

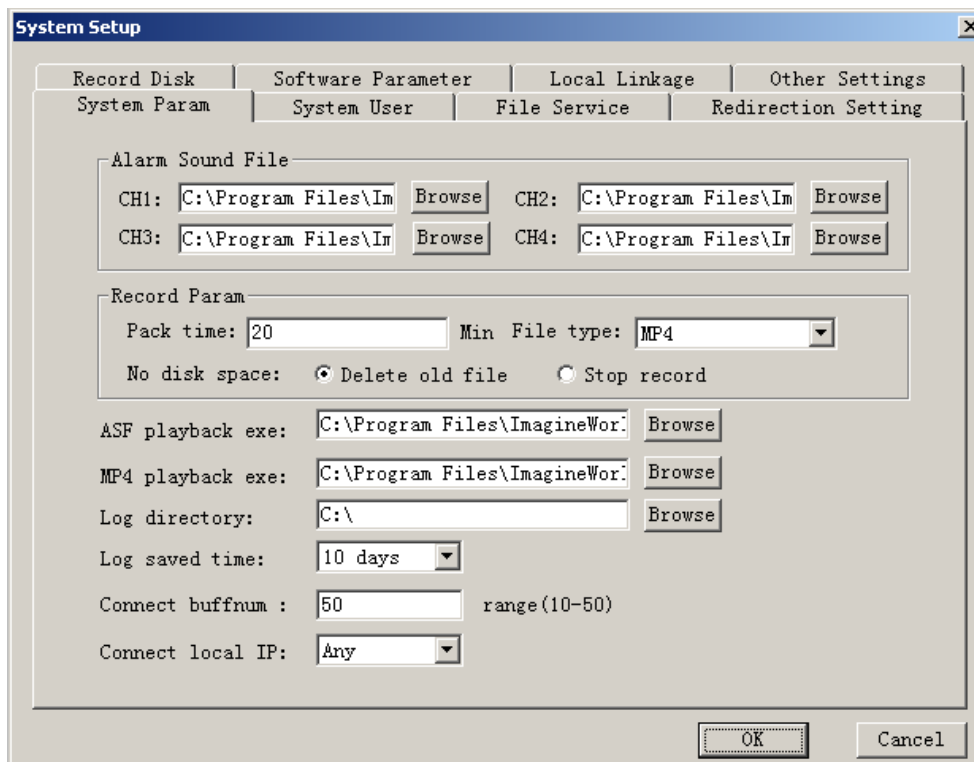


Server assignment: add network video servers to be central managed.

Loop view parameters: use any custom combination of different cameras and frame displaying modes in server channel list to construct polling page. You can also choose 'auto configuration' to construct polling page.

Edit electronic map: to create and edit electronic map.

Server remote parameters: It is able to set the device parameter, channel parameter, PTZ parameter, sensor alarm parameter, disk, etc. Disk item can show the list of hard disk status in server and manipulation to format hard disk.

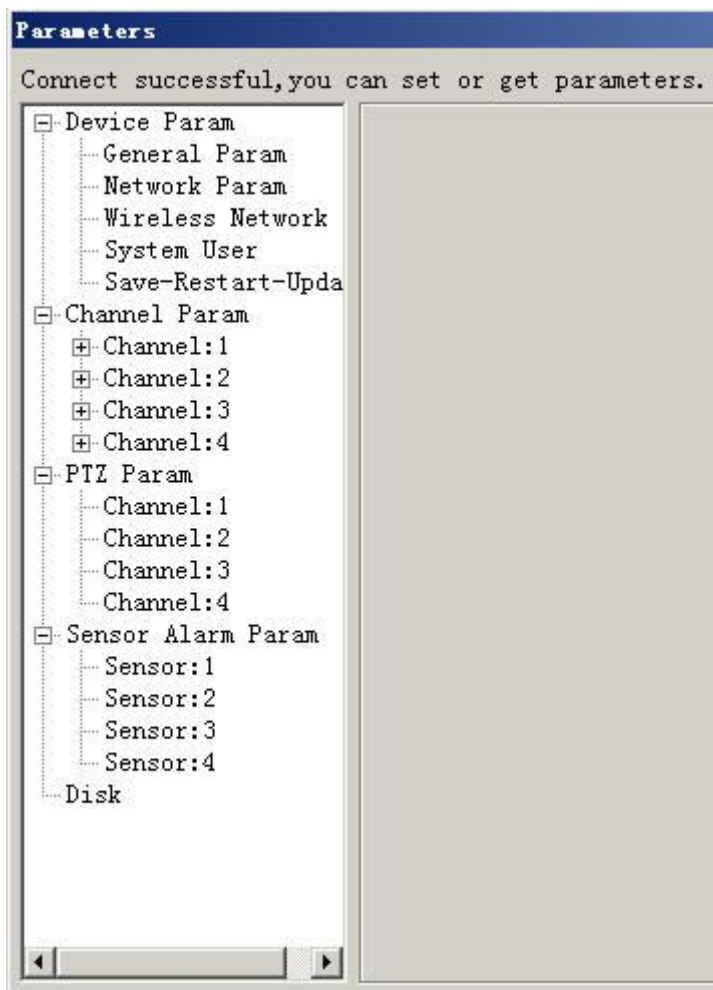


Server local parameters: it includes two selecting items, external alarm parameter and external sensor linkage. Mainly sets the alarm function of external alarm device of local server.

Export parameter: export system parameter in a certain time into file for storage and backup.

Import parameter: import system parameter into system; need to reboot program for going into effect after successful import.

4.4 Help

Version and copyright information of ImagineWorldClient displayed by 'help' menu

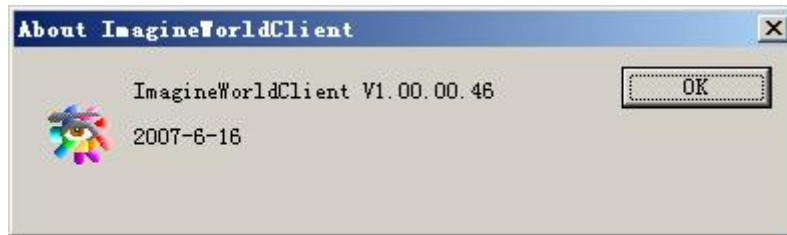

4.5 Mouse Operation

Click left button of mouse on one video frame to choose the video. Double click left button of mouse on one video frame, if there is video in the frame, then the video will be displayed in full screen mode; double click the screen again, it will return to previous displaying mode.

5.0 Real-Time Video Display and Control


Real-time video controlling function of ImagineWorldClient can realize the control of displaying images, PTZ and carry out some practical processing on video images.

5.1 Real-Time Video Frame Control

Real-time Video Frame Control contains multi-frame switching, polling displaying control, page up/down, devices ordering and main screen display.


5.1.1 Displaying Mode Switching


ImagineWorldClient supports six displaying modes: single-frame, 4-frame, 6-frame, 8-frame, 9-frame, and 16-frame. 16-frame displaying mode is system default mode. When starting ImagineWorldClient, system will display the video of anterior 16 channels in device list of this client-side in 16-frame mode. Users can switch displaying modes by



toolbar at the bottom.

5.1.2 Single Frame Displaying


Click  button in bottom Toolbar and switch to single-frame displaying mode.

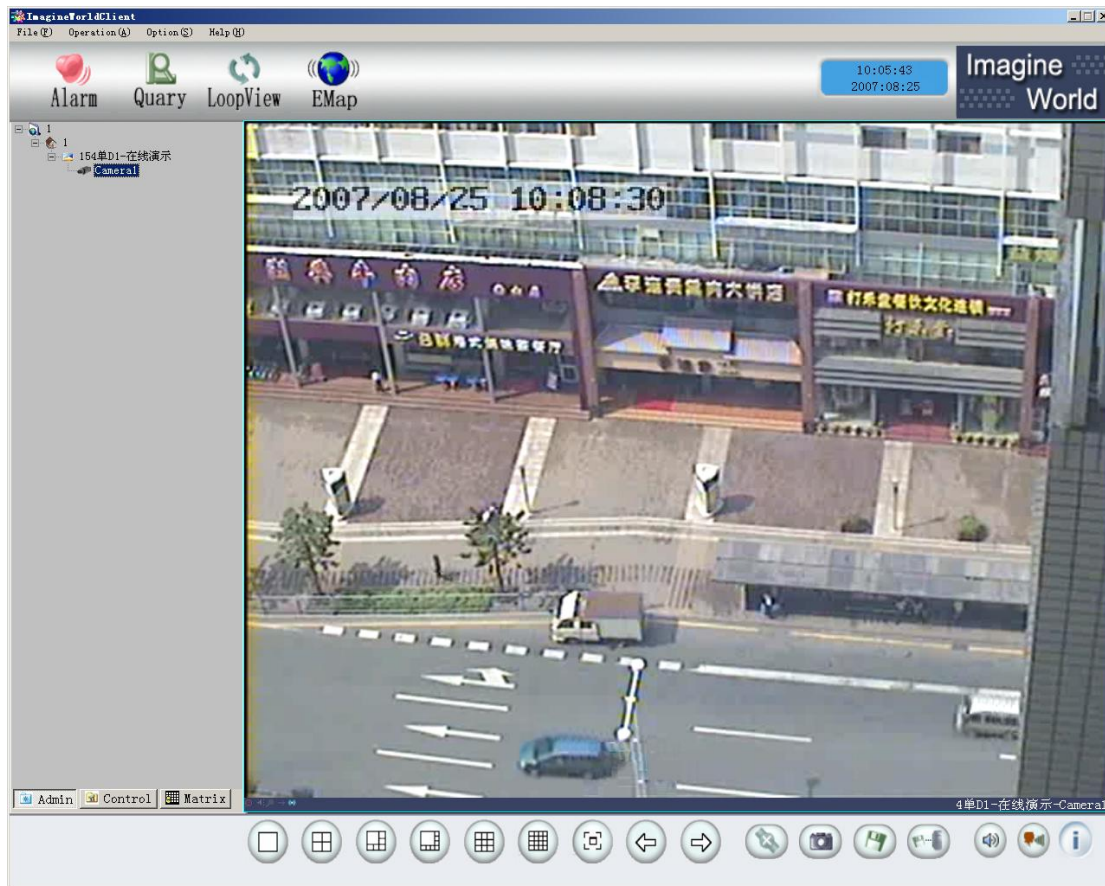

In single-frame displaying mode, users can set fluency level of playing and code quality of selected video channel separately.

5.1.3 Full Screen Displaying

To display single or multi-frame video at full screen size and hide all menus and

toolbars. Click  button in bottom Toolbar and switch to full screen displaying status; double click the frame to exit full screen displaying status.

5.1.4 LoopView Monitoring


LoopView monitoring refers to display the video of all channels in the device list of client-side page by page under current displaying mode (single or multi-frame). It


can be achieved only when users group which the client-side belongs to is authorized to carry out “Loopview Monitoring”

If connect with more than one camera, you can choose “**Add Page**”. You can choose the partition mode of displaying the pages (e.g.: single-frame, 4-frame, 6-frame, 8-frame, 9-frame, 16-frame displaying mode), and then choose “**Add Channel**” in each page to add camera.

Also you can set displaying mode for polling monitoring in ‘**Display Mode**’ and then click ‘**Auto Config**’ to realize above function.

Polling time for each page can be set separately in ‘**Stay Time**’. Method: click “**Pages List**”, and set time interval for images switching separately in “**Stay Time**”, then click ‘**Change Stay Time**’ after setting.

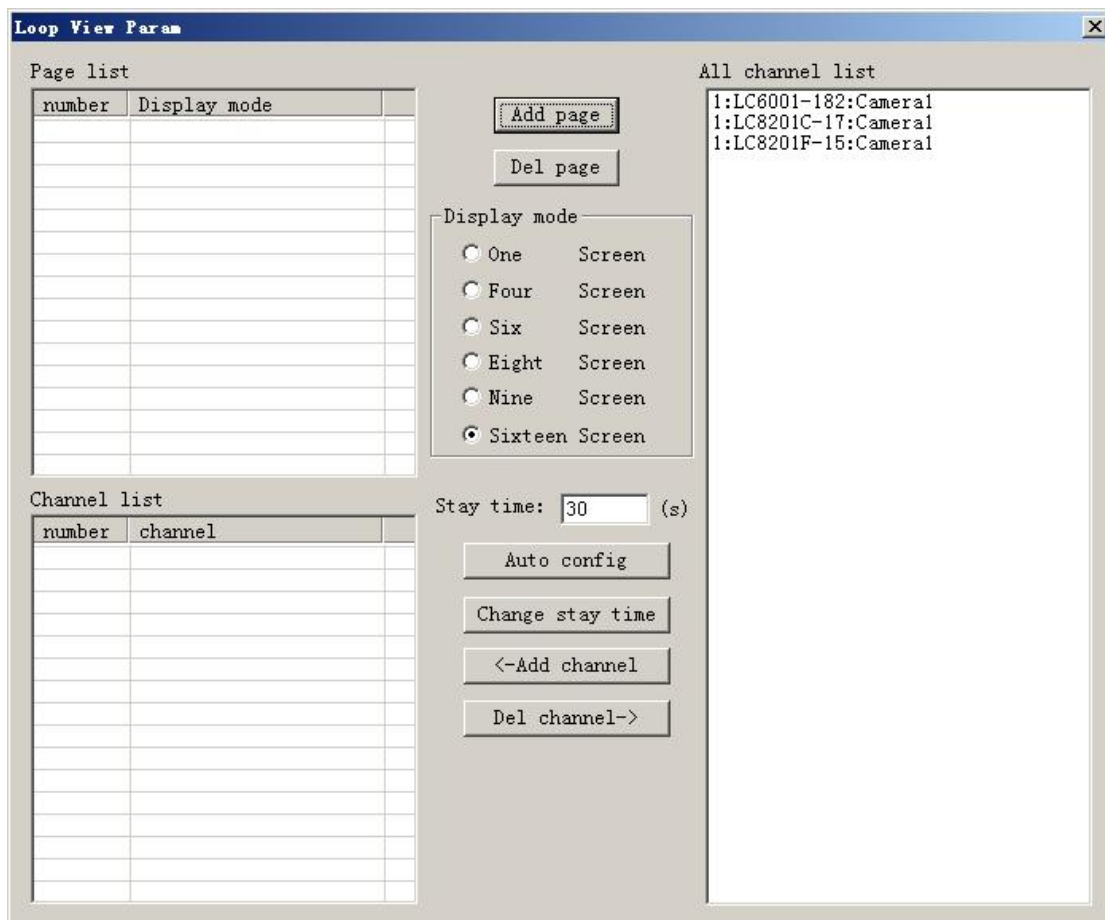

After accomplishing the setting, click  in top toolbar, and then system will start polling displaying for real-time video, and display the videos of all channels in device list of client side page by page according to the number of currently displayed frames. When system enters polling status, all buttons in interface can't be used.

Click ‘**Loopview**’  in top toolbar again to exit polling displaying status.

5.2 Pan/Tilt/Zoom Controlling

The client-side can control the pan/tilt and lens of the device at front-end only when users group of this client-side is authorized with “PTZ Controlling”. Authority limits of this client-side will be set in ImagineWorldClient application software.

ImagineWorldClient can carry out following control of PTZ:



Lens UP/DOWN



Lens turn LEFT/RIGHT



Auto rotation ON/OFF



Lens ZOOM UP/DOWN



Focus FAR/NEAR



Iris ZOOM UP/DOWN



Invoke PRESET POINT



Set PRESET POINT



Loop PRESET POINT: Loop PRESET POINT setting and invoke



Auxiliary Equipment:switch ON/OFF, max. Support 8 auxiliary equipments.




Speed of the movement of the P/T camera FAST/SLOW


5.3 Camera Assignment

The client-side can allocate server only when users group of this client-side is authorized with 'Server Assignment'.


Before this, if video servers are in the same LAN, please make sure that the IP net segment of your equipment conforms to video servers. Choose **【Server Assignment】** button in “Option” in top menu.

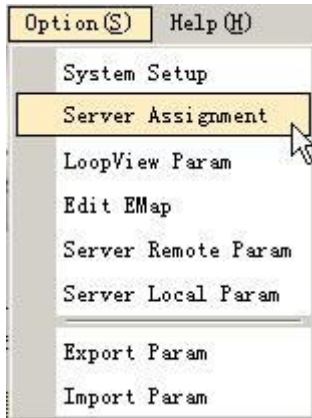

Click right button of the mouse in pop-up server assignment window, and choose “Add Projects” in pop-up menu. Choose “Add Groups” for newly built project by clicking right button after entering the name, then click right button for newly built group and choose ‘add server’.

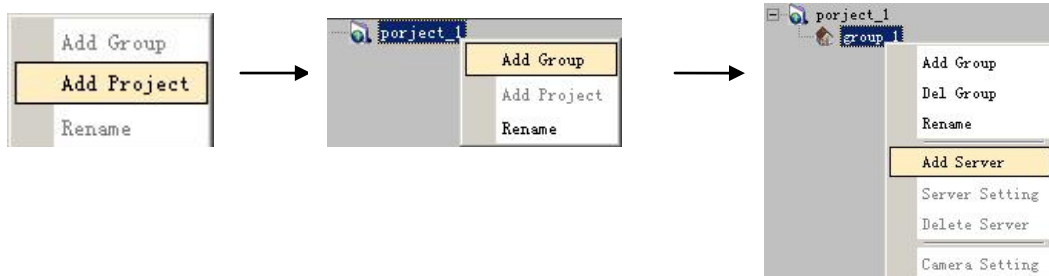


Enter server’s name, address and port number, users name and password in pop-up dialogue-box. If one of them is filled incorrectly, an Error type dialogue box will pop up.

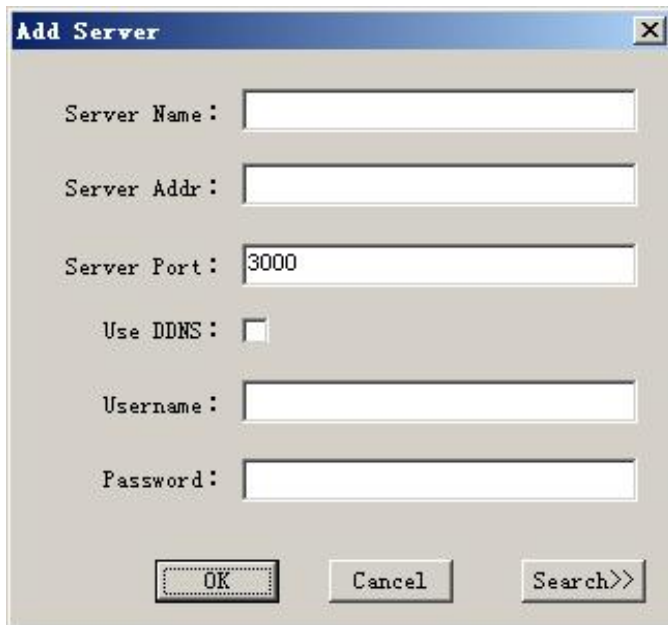

- **Server's name:** refers to the name of the video server to be connected. This name is unique identification in the same area, which will serve for dynamic domain name or transmit connection as identification. So it is required to avoid repetition during registration and connection.
- **Server address:** IP address or domain name can be used as connecting server address. Pay attention that don't fill the 'http://' part.
- **Server port:** refers to data port of the server, which default is 3000.
- **Using DDNS:** DDNS refers that the built-in DDNS client in the video server works together with DDNS client-side provided by developer. When using DDNS function, server's name is identification of searching for this server. If the name of server is incorrectly entered, it will return to error information of unable to find server.
- **User name and password:** default user name and password both is 888888


After entering above information correctly, click ok button to exit setting interface, and the system will connect assigned server automatically and display video.

You can also click "Search" button in the bottom right-hand corner, and window as following will pop up:

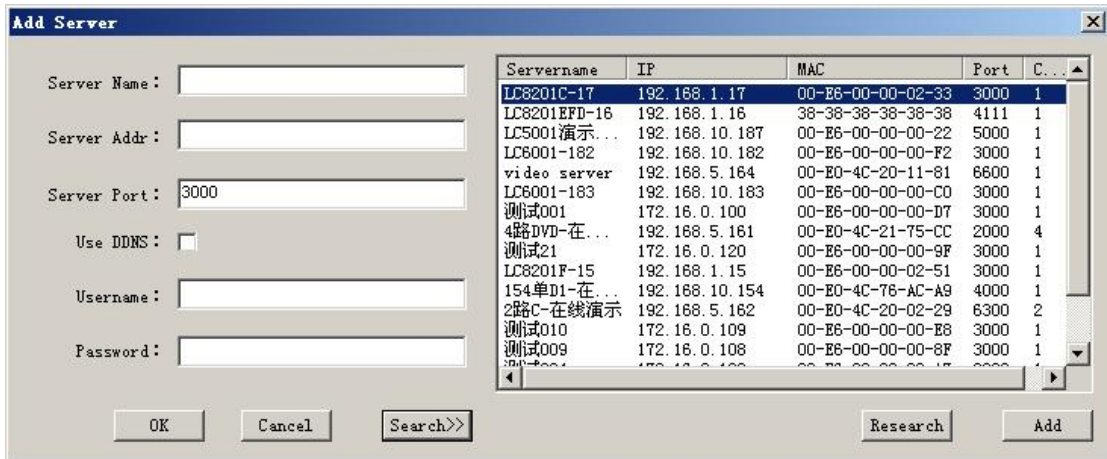

Double click IP address to choose and click ok to finish.


After this, the interface will display as follows:

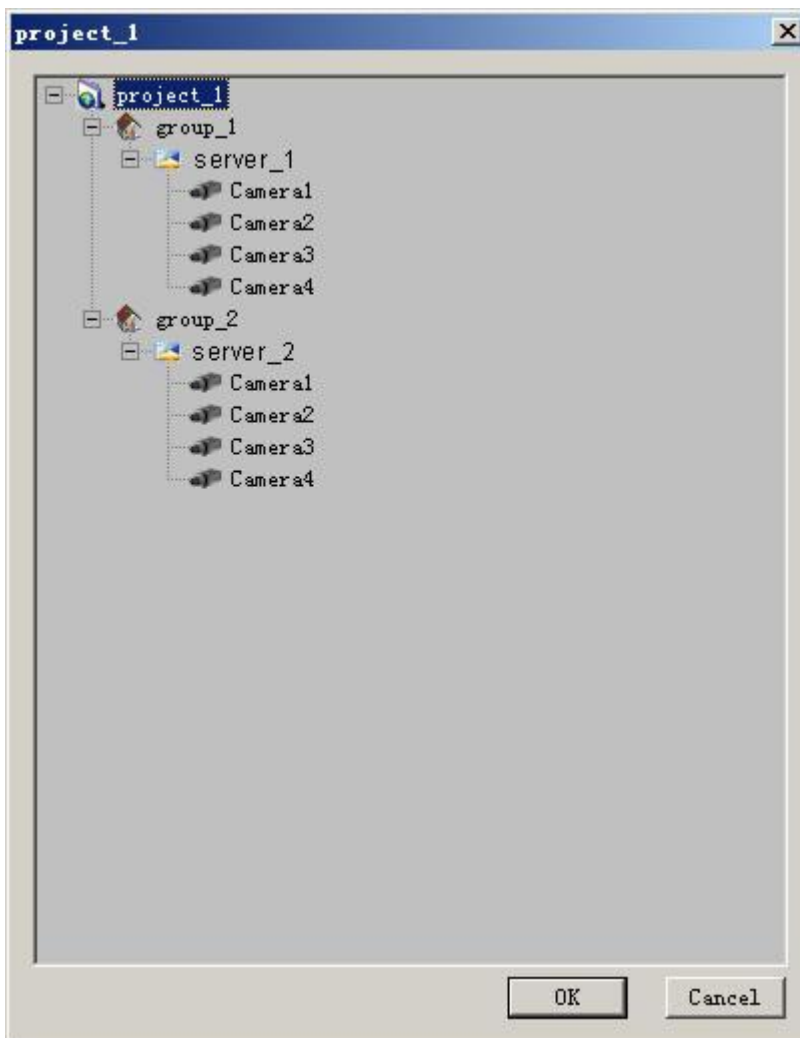

If you want to delete a certain assignment, which has been set, click right button on the target video server in server allocation dialogue box to generate a pop-up menu. Choose 'delete server' in the pop-up menu.

6.0 Local Retrieval and Record Playback

Within authorization, the client can retrieve and play back the video files in the server. The retrieval window is showed as following:

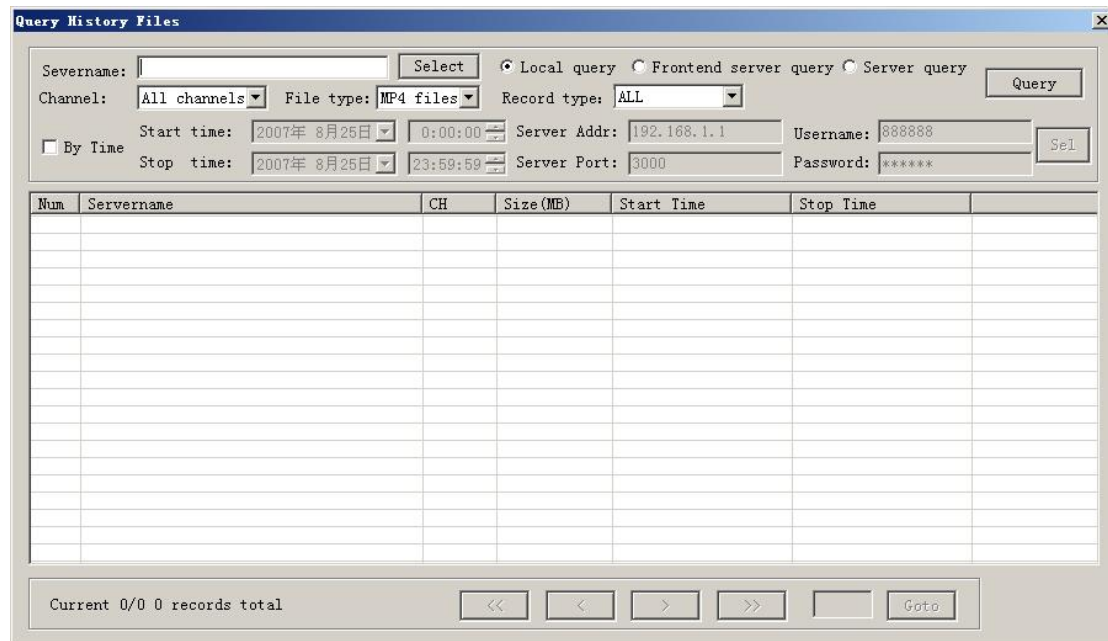

Retrieval and recording playback functions contains: MP4 format recording file retrieval and playback, ASF format recording file retrieval and playback, JPEG format recording file retrieval, BMP format file retrieval, server recording playback, local recording play back, etc.


6.1 Record Retrieval

To retrieve video recording files stored in server or local server according to recording time of selected equipment and recording type, it is easy to obtain video recording files correctly. Equipments under retrieving must be in the equipment list at client side, otherwise they cannot be retrieved. The client-side can carry out retrieval only when the users group that this client-side belongs is authorized with "Video Recording Retrieval".



Click **Query** under top menu, and system will pop up window of Video Recording Retrieval.


Choose recording file which you want to enquire according to necessity in




Local retrieval: to retrieve video files stored in local host computer

Front-end server retrieval: to retrieve video files stored in the video server. It is required

to select and input the name of video server.

- 1) Set wanted date and time zone for retrieval, and only the video recording to be retrieved within selected time zone can be found out; default is entire time zone.
- 2) Choose equipment channel under retrieval from the pull-down box; default is all channels
- 3) Choose wanted file type (MP4 File/ASP File/JPEG File/BMP File) for retrieval; default is MP4 format video file.
- 4) Click .

If there is recording information meeting those conditions, they will appear in the video information list under window, as follows:

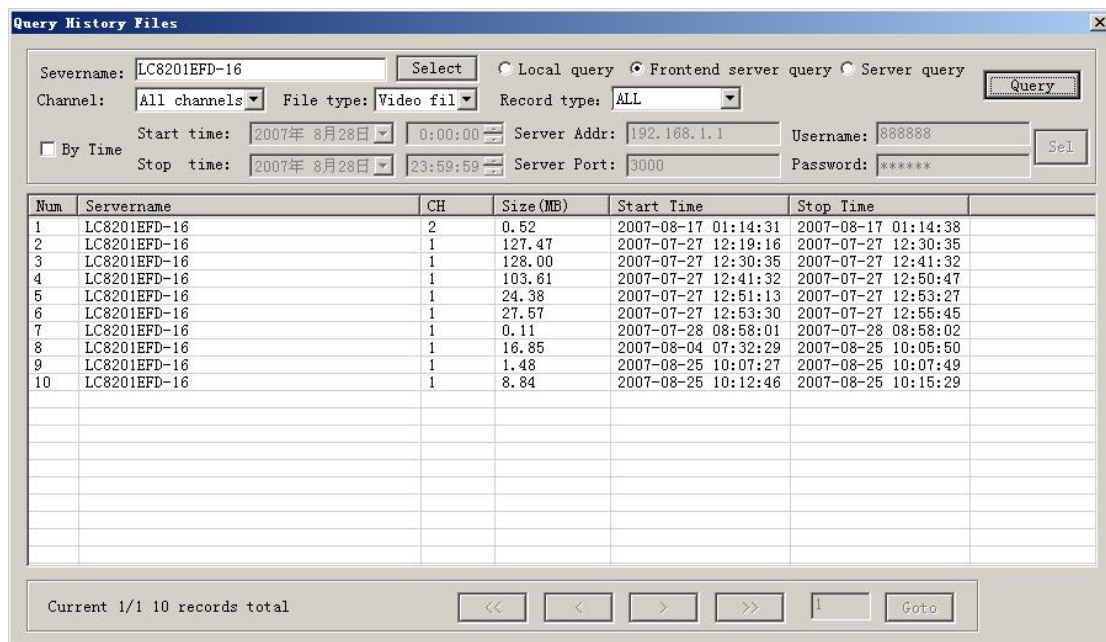


The screenshot shows a window titled "Query History Files" with the following fields and controls:


- Servername: LC8201EFD-16 (with a "Select" button)
- Channel: All channels (dropdown)
- File type: Video fil (dropdown)
- Record type: ALL (dropdown)
- Buttons: Local query, Frontend server query (selected), Server query, Query
- By Time checkbox (unchecked)
- Start time: 2007年 8月28日 (calendar), 0:00:00 (time)
- Stop time: 2007年 8月28日 (calendar), 23:59:59 (time)
- Server Addr: 192.168.1.1
- Username: 888888
- Server Port: 3000
- Password: *****
- Buttons: Sel

Num	Servername	CH	Size(MB)	Start Time	Stop Time
1	LC8201EFD-16	2	0.52	2007-08-17 01:14:31	2007-08-17 01:14:38
2	LC8201EFD-16	1	127.47	2007-07-27 12:19:16	2007-07-27 12:30:35
3	LC8201EFD-16	1	128.00	2007-07-27 12:30:35	2007-07-27 12:41:32
4	LC8201EFD-16	1	103.61	2007-07-27 12:41:32	2007-07-27 12:50:47
5	LC8201EFD-16	1	24.38	2007-07-27 12:51:13	2007-07-27 12:53:27
6	LC8201EFD-16	1	27.57	2007-07-27 12:53:30	2007-07-27 12:55:45
7	LC8201EFD-16	1	0.11	2007-07-28 08:58:01	2007-07-28 08:58:02
8	LC8201EFD-16	1	16.85	2007-08-04 07:32:29	2007-08-25 10:05:50
9	LC8201EFD-16	1	1.48	2007-08-25 10:07:27	2007-08-25 10:07:49
10	LC8201EFD-16	1	8.84	2007-08-25 10:12:46	2007-08-25 10:15:29

Current 1/1 10 records total


Navigation buttons: << < > >> 1 Goto

When the quantity of recording information is more than 20 pieces, you can view more recording information by page up/down buttons .

Click  in this operating interface, the system will return to main operating interface and save the parameters automatically.

6.2 File Download

Download operation can be run to the file retrieved. In the enquiring result list, click right button on the file wanted to be downloaded. Choose 'download' in the pop-up menu, and it is done. If retrieved recording file is MP4 format, you can choose 'download and transfer to ASF' item in the menu, it is downloaded and save as ASF format file

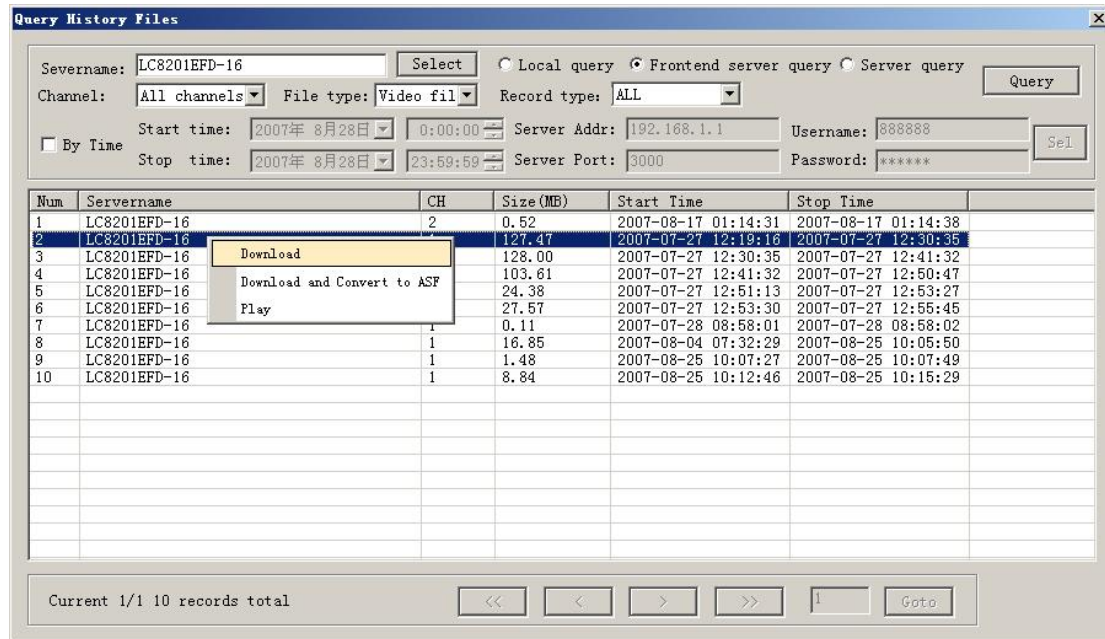

6.3 Record Playback

Choose recording files that you want to played back, double click the recording information and a preset video player will pop up, by which you can see the video.

- The recording will skip forward to any position by dragging the setting lever at low part of the video player;
- You can adjust playing speed by dragging the speed setting lever;
- Displaying sizes (50%/100%/150%/200%/full screen) for video files can be set in the top menu of the player. Some formats may not support to switch the displaying size. The size of buffer area can be set, to assure fluently playing. Also it possesses auxiliary function of changing files from MP4 format into ASF format.



7.0 Alarm Processing

Alarm organization of the system will be set by ImagineWorldClient application software. Client will receive the alarm signals sent by application software and carry out corresponding actions on the alarm.

Reactions on the alarm includes recording, capturing and triggering alarm output for triggering channels according to the preset parameters. And you can choose whether upload these files to central server directly.

8.0 Audio Monitoring and Intercommunication

Within authorization limitation the client can monitor the audio of front-end equipment and intercommunicate with it as well. Working mode is full duplex.




The monitoring function at this client side is controlled by equipment voice switch at bottom Toolbar. Click the switch to connect or disconnect the audio playing of front-end equipment.

The intercommunicating function at this client side is controlled by equipment intercommunication switch at bottom Toolbar. Click the switch to connect or disconnect the intercommunication with front-end equipment.


9.0 Electronic Map

9.1 Create Electronic Map


Firstly it is necessary to build up plane map by drawing tools outside the system, and the format should be bmp. Then choose to enter 'Edit Electronic Map' through 'Setting' item in top menu.

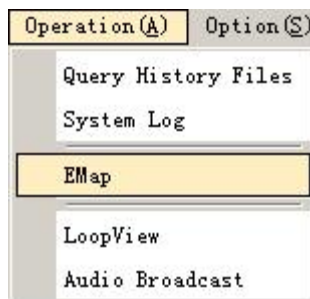

Click right button of the mouse on the left frame; choose "Add Scene" in pop-up menu and then choose "Load Map" to finish initial building for electronic map. The name of built map will be displayed in the window of server list. Double click the map name to open or switch electronic map.

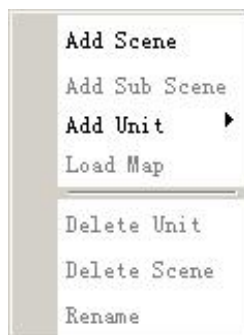


Click right button on newly built scene, choose "Add Equipment" in pop-up menu, then you can choose to add camera, alarm probe or alarm output.

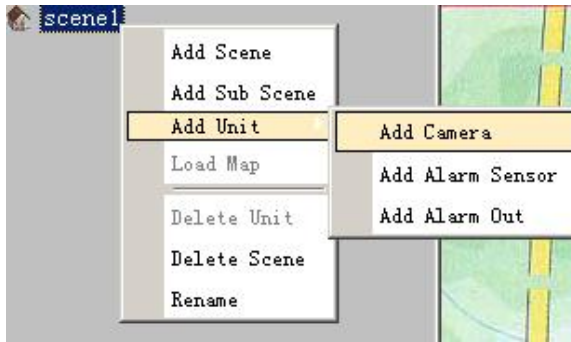

After selecting you can find camera icon on the upper left corner of the map. Click left button of the mouse and drag it to monitoring position, then close.




After returning to main interface, choose  in top menu. Images currently under monitoring can be displayed by clicking camera icon on the map.



Functions of ImagineWorldClient electronic map is to download and display electronic map in application server, and update the electronic map downloaded to the client side.

9.2 Alarm Linkage and Electronic Map

After successful creation of electronic map, return to main interface and choose tab 'software setting' in 'system parameter' item in 'setting' menu. Choose 'pop up electronic map' item in list box 'alarm action' and click 'confirm' button to save this setting. At this time, electronic map and video recording of alarm site will pop up when alarm happens. And the location of alarm monitoring site will be marked. Setting as follows:

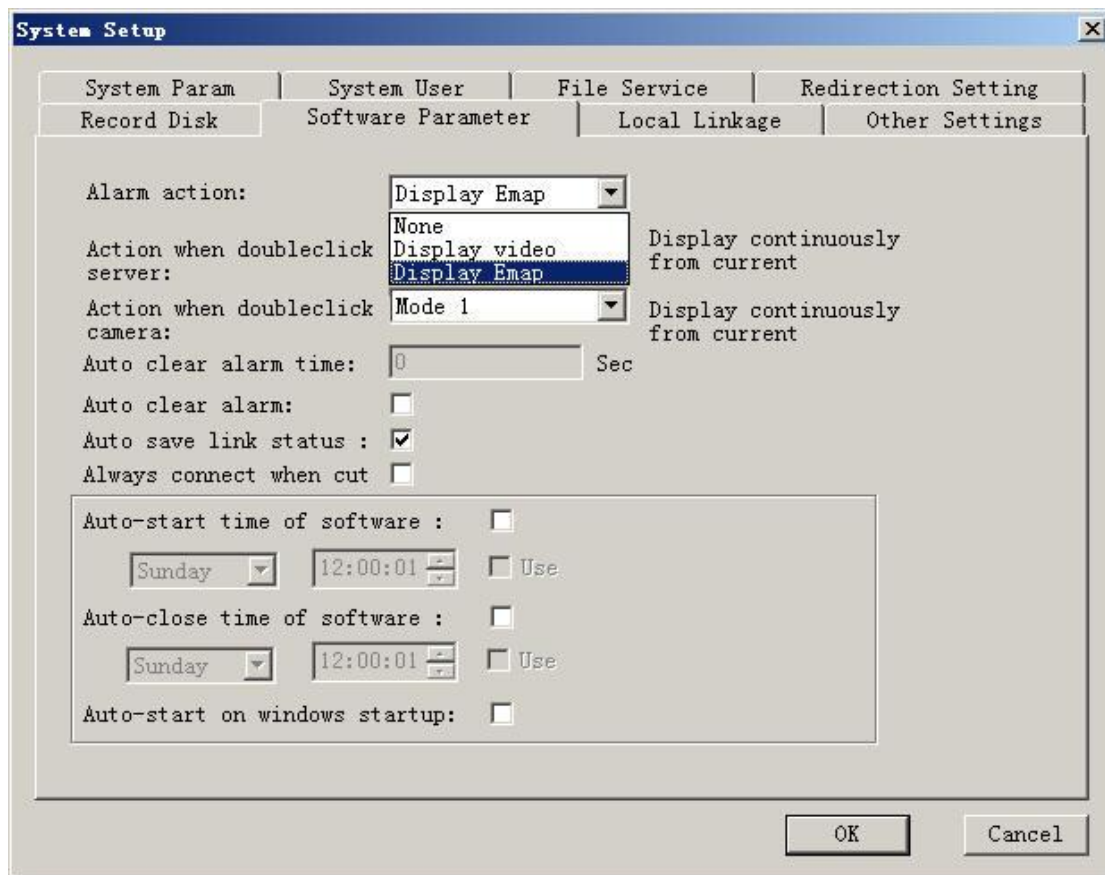

10.0 Client-side System Parameter Setting

System setting includes five items: system parameter, system user, file service, transmission setting, recording HD setting, software setting, local linkage, and other settings.

10.1 System Parameter

Set alarm voice for different channels, files packing time, play program for recording file, log saving directory and saving time, etc.

System Setup

Record Disk | Software Parameter | Local Linkage | Other Settings
System Param | **System User** | File Service | Redirection Setting

Alarm Sound File

CH1: C:\Program Files\Im Browse CH2: C:\Program Files\Im Browse
CH3: C:\Program Files\Ir Browse CH4: C:\Program Files\Ir Browse

Record Param


Pack time: 20 Min File type: MP4
No disk space: Delete old file Stop record

ASF playback exe: C:\Program Files\ImagineWor: Browse
MP4 playback exe: C:\Program Files\ImagineWor: Browse
Log directory: C:\ Browse
Log saved time: 10 days
Connect buffnum : 50 range (10-50)
Connect local IP: Any

OK Cancel

10.2 System User

You can add and modify the user's name and the password; also you can set authorization limit for different users.

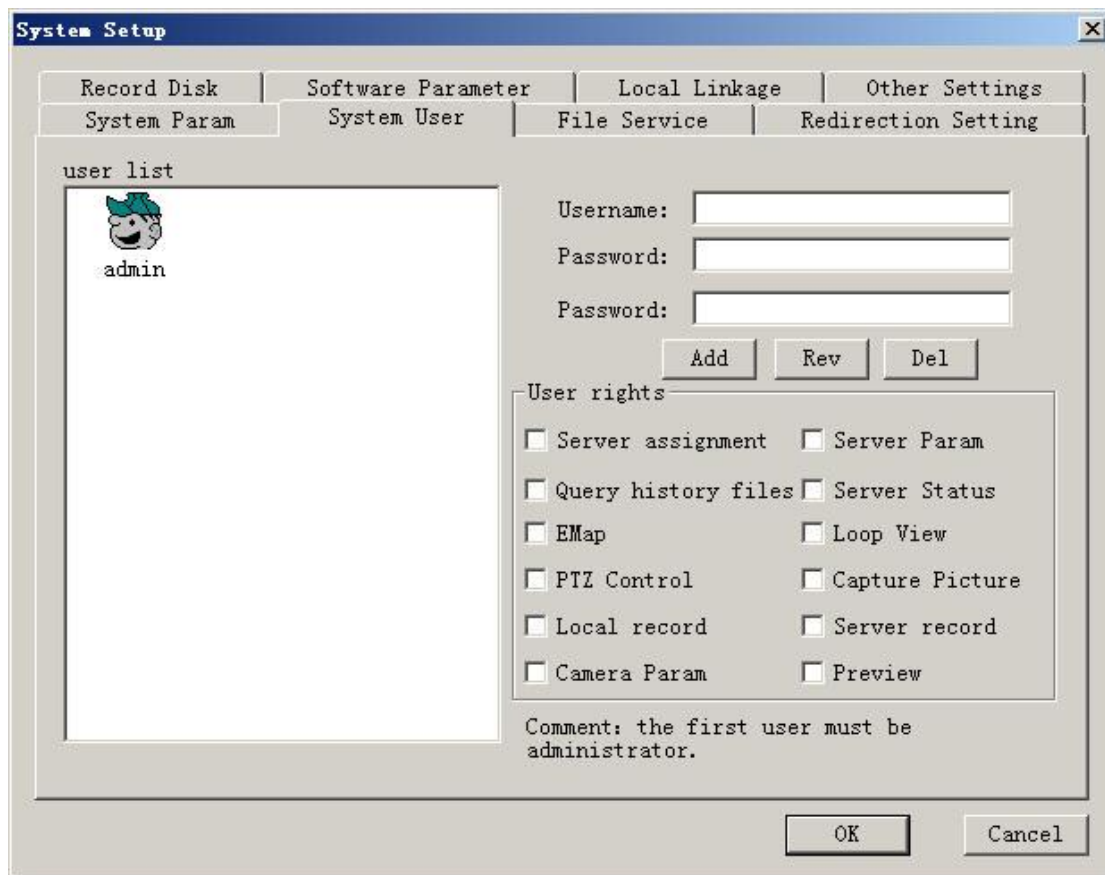


10.3 File Service

Turn on the access to server from remote host.


After turning on the access function of data retrieval can be realized only when service port, user's name and password of the host computer are consistent with those setting of remote host computer. The system default is: the status of this service is on. Default value is: server port: 3000, user's name: 888888, password: 888888.

File download speed limits the download speed of remote host, which manipulate file download from accessed server. The default value is 0; it means no limit of download speed.

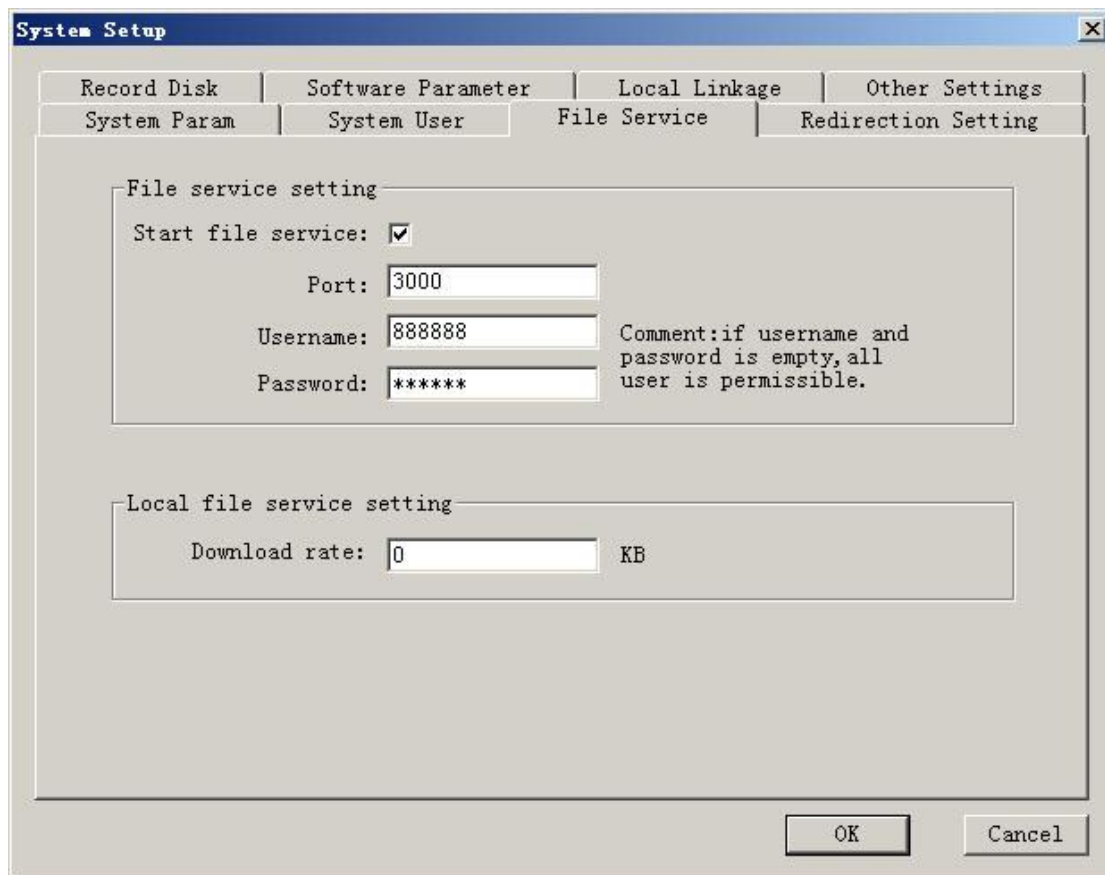

10.4 Setting Transmission Server


Video server management software has data transmission function. If you want to activate this function for the video signals of a channel, select option of **[Start Transmission Service]** (under which transmission server parameters all refer to address parameters of the server that this management software belongs to). Number of channel users refers to the maximum of users for connection, and number of system users refers to the total amount of users that connect with this server. After setting these parameter, the manage software has to be closed and they will come into effect after restarting the software. It is necessary to note that the setting of local ports and multi-switch address should not conflict with other program. The picture is showing as following:

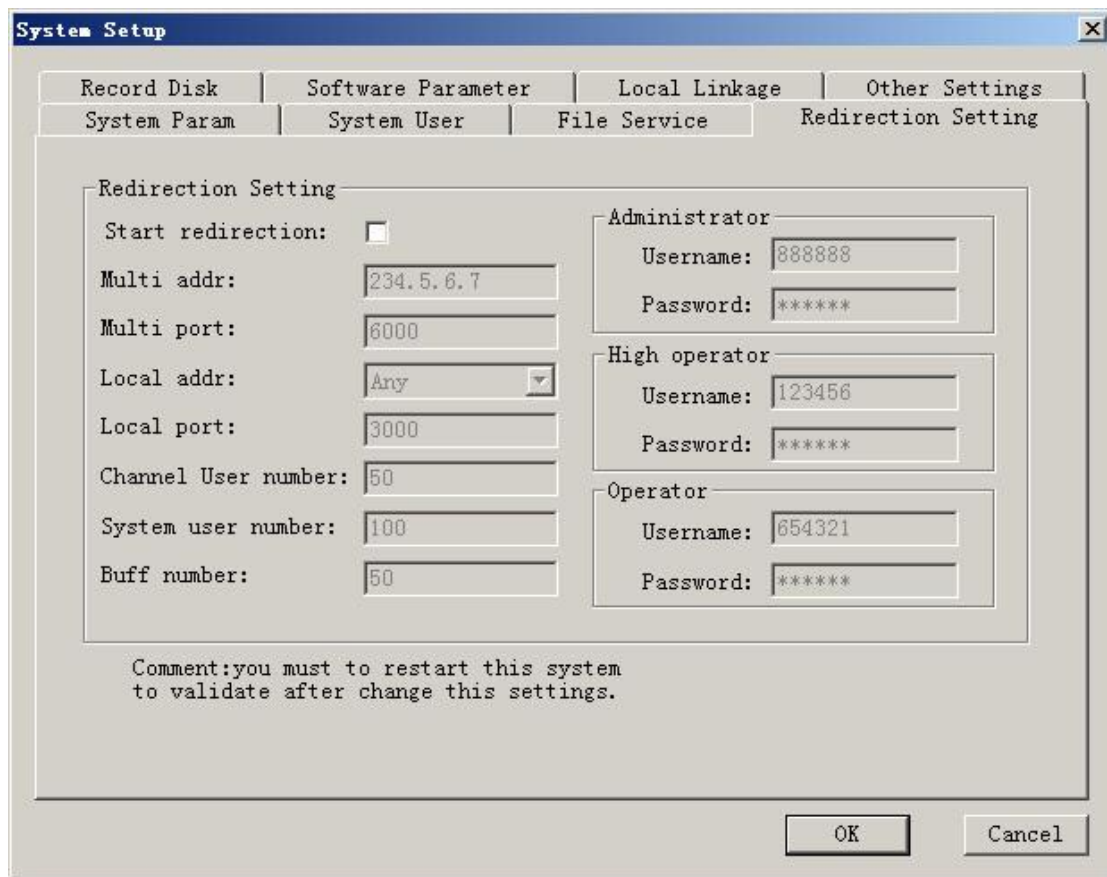

After finishing the setting of the transmission service end, other equipment can be switched on to connect with the transmission server.


10.5 Video Hard Disk Management

Type, capacity and total spare space of local recording HD can be displayed here. Users can also choose where to save the video recording independently.

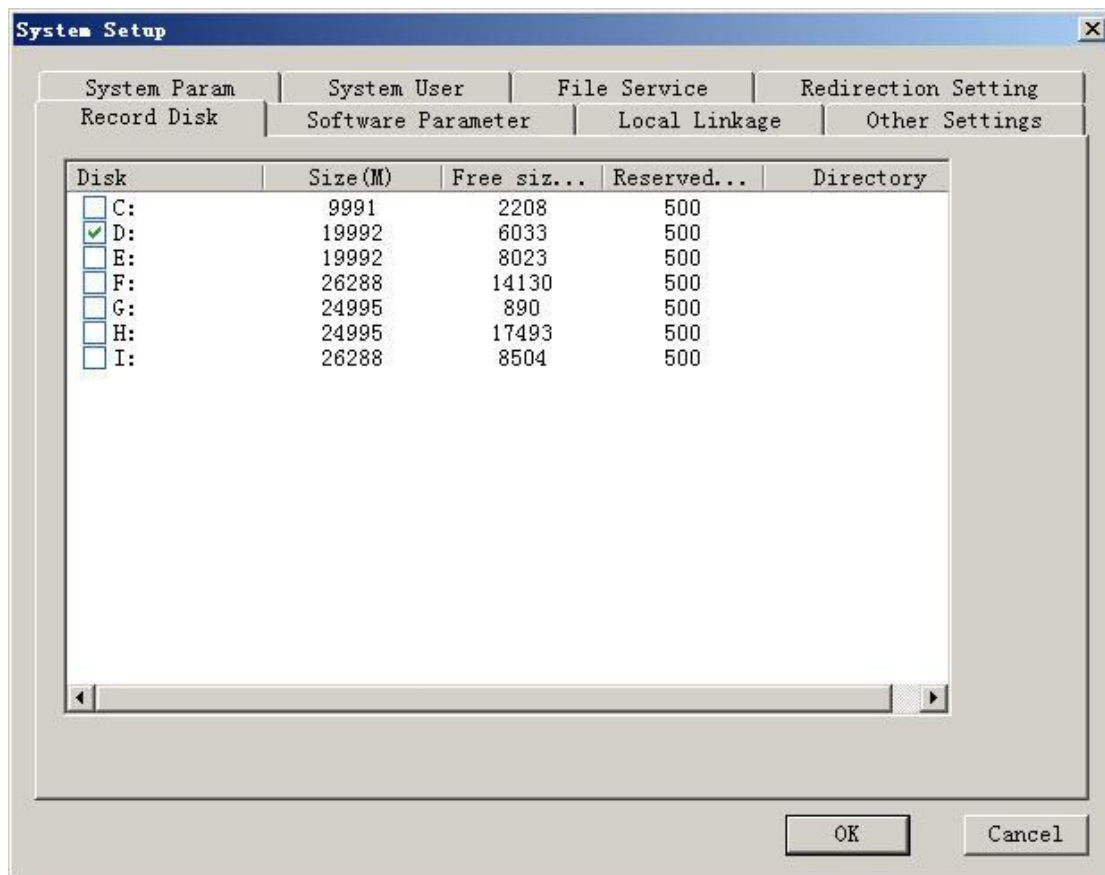

10.6 Software Setting

This setting mainly works on the working mode and status of software.

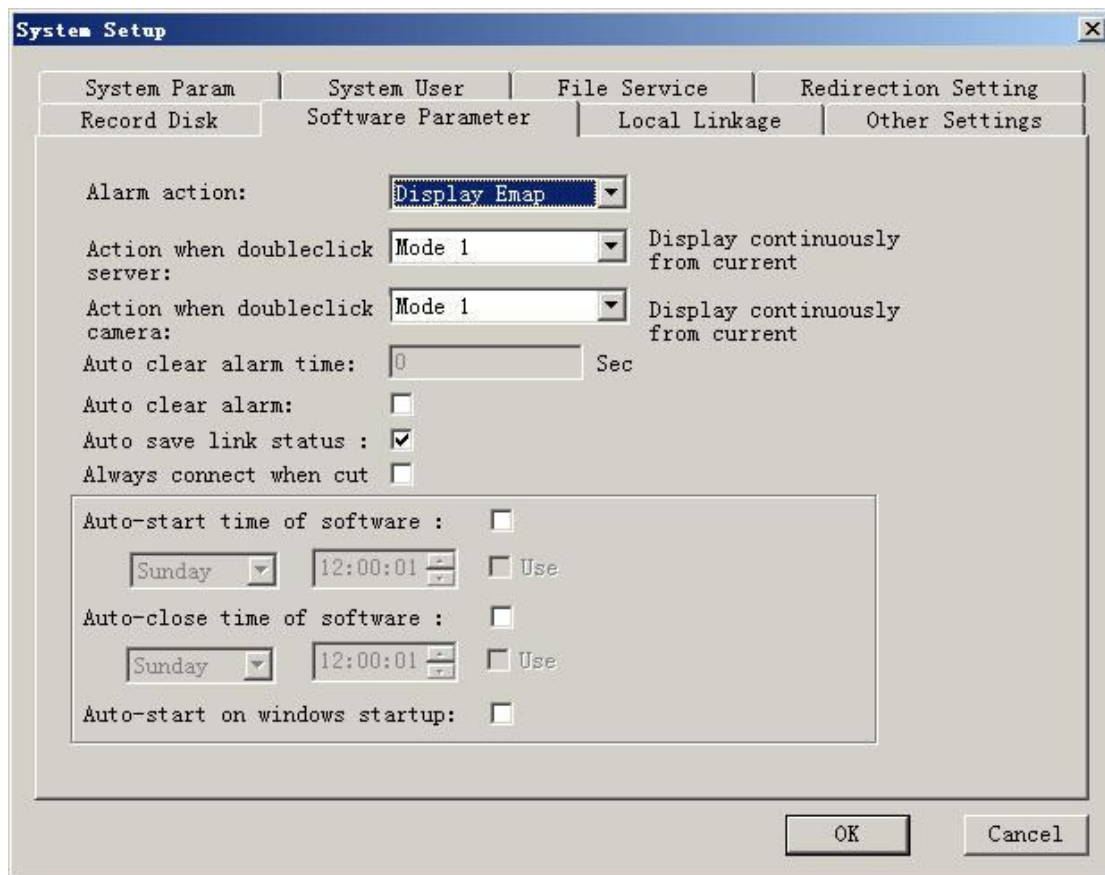

- **Start of software:** define the start and stop date and time of software. You can also choose whether software runs automatically by the start of windows system.
- **Alarm action:** the awakening mode when cameras in video server list generate alarm signal, includes three options as no action, pop up video, pop up electronic map. Hereinto, the video and according electronic map of alarm site will pop up when you choose option 'pop up electronic map';
- **Double-click action of server:** have three modes to choose.
- **Double-click action of camera:** have three modes to choose.
- **Auto alarm cleanup:** clean up alarm by system after alarm happens.
- **Time of auto alarm cleanup:** system clean up alarm at the setting time after alarm happens.
- **Auto saving of connection status:** save the current connection status between client-side software and video server. Client-side software will read the last saving connection status when restart next time.
- **Auto reconnection all the time:** when video server connected by client-side software abnormally disconnected, system will automatically require connecting again, even without manual operation.

10.7 Local Linkage

Mainly set the communication between host and external serial-port device. Pay attention when you set. The choice of serial ports should have no confliction.

System Setup

System Param System User File Service Redirection Setting
Record Disk Software Parameter Local Linkage Other Settings

Local Link

Serial Port: COM1 Address: 0
Protocol:
Control File: Select
Update File

Keyboard Serial Port

Serial Port: COM1 Baud Rate: 9600 Data Bit: 8
Stop Bit: 1 Parity Bit: No Protocol: PELCO D/I


Alarm Serial Port

Serial Port: COM1 Baud Rate: 9600 Data Bit: 8
Stop Bit: 1 Parity Bit: No

OK Cancel


10.8 Other Setting

When software is running, you can invoke other programs without leaving monitoring screen simultaneously.

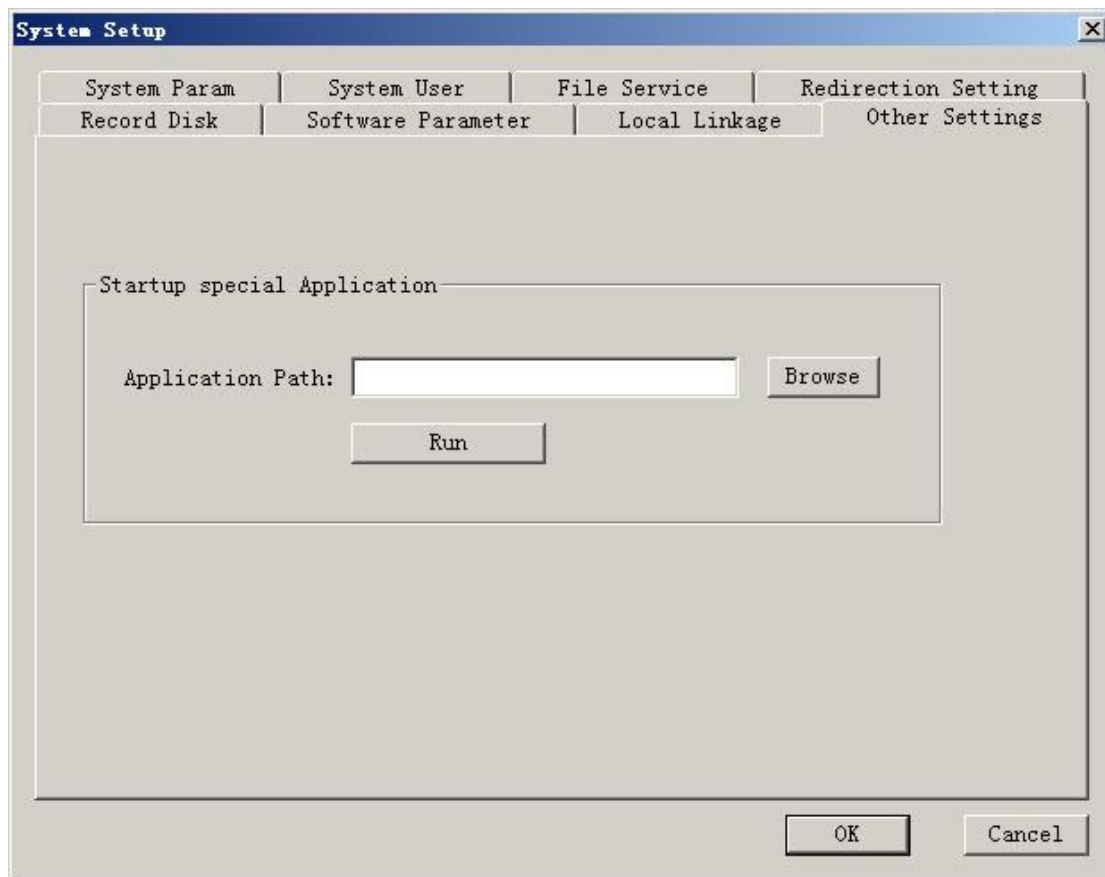

11.0 Configuring Parameter Setting of Video Server

It mainly contains following functions: equipment network setting, channel parameter setting, cradle head parameter setting, equipment HD information, multi-playing, etc. Multi-playing is an optimum resolution for large amount of users visiting one video server at the same time. But please note: some router doesn't support or unlock this function if you would like to realize this function on WAN. See the picture as following:

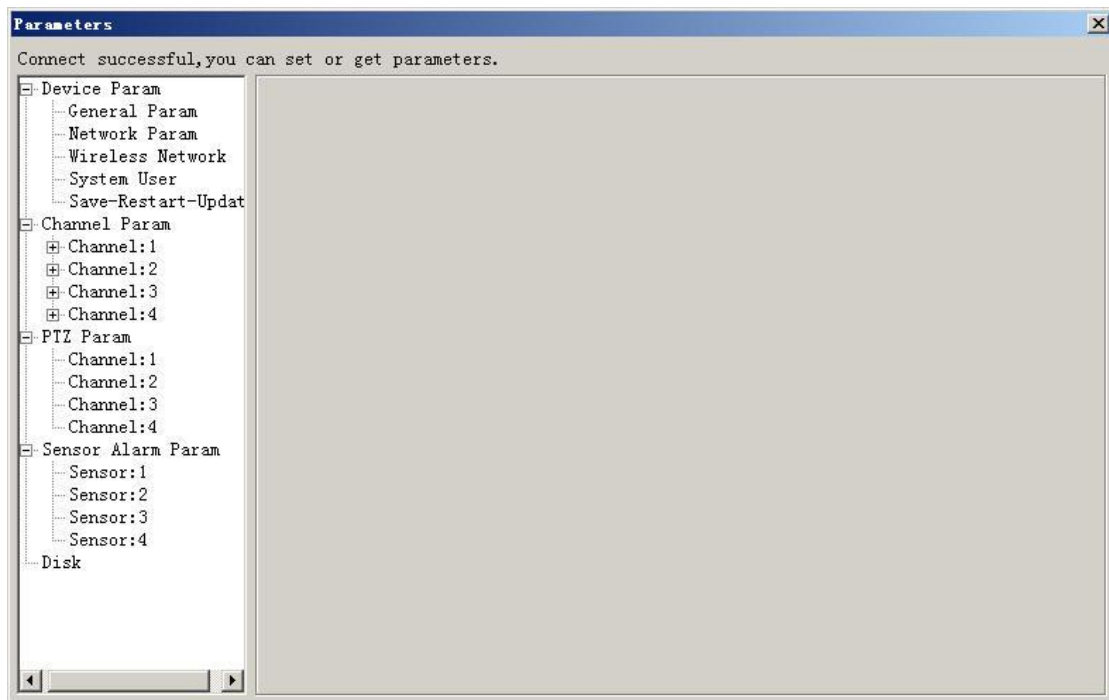


11.1 Equipment Parameter Setting

It's the most basic parameter setting for video server.


11.1.1 Basic Parameter

The basic parameters of server consist of version info, mode selection, setting reboot time, and language selection, etc. Hereinto, language selection is the selection of language about overlapping date and time on the real-time image. It has Chinese and English options.

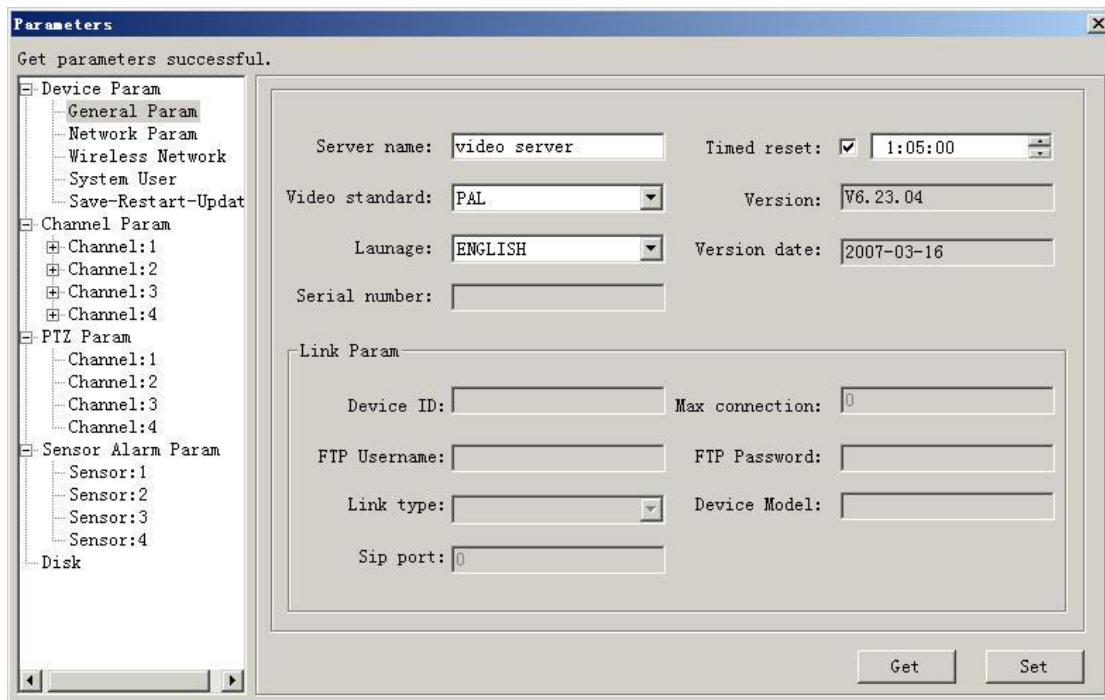

11.1.2 Network Parameter


The network parameters of video server can be modified. Note that server have to reboot after modification of network parameters so that they come to effect.

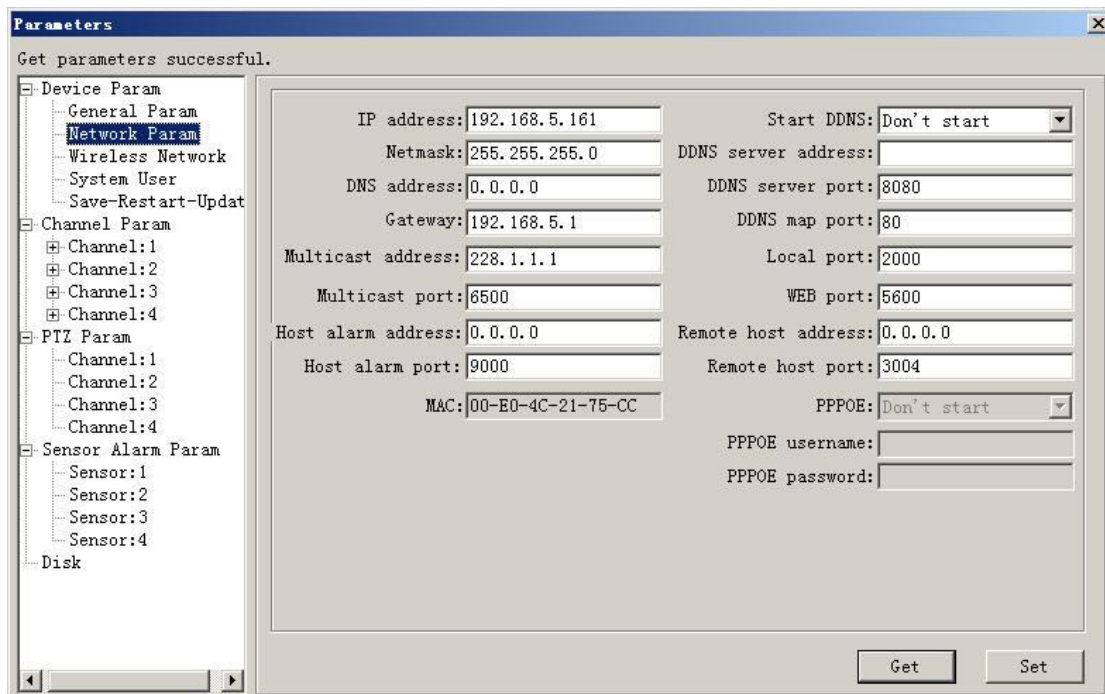

11.1.3 Wireless Network


This setting is only useful to IP camera, which has wireless function. User can choose

to use CDMA network or 802.11g wireless network.

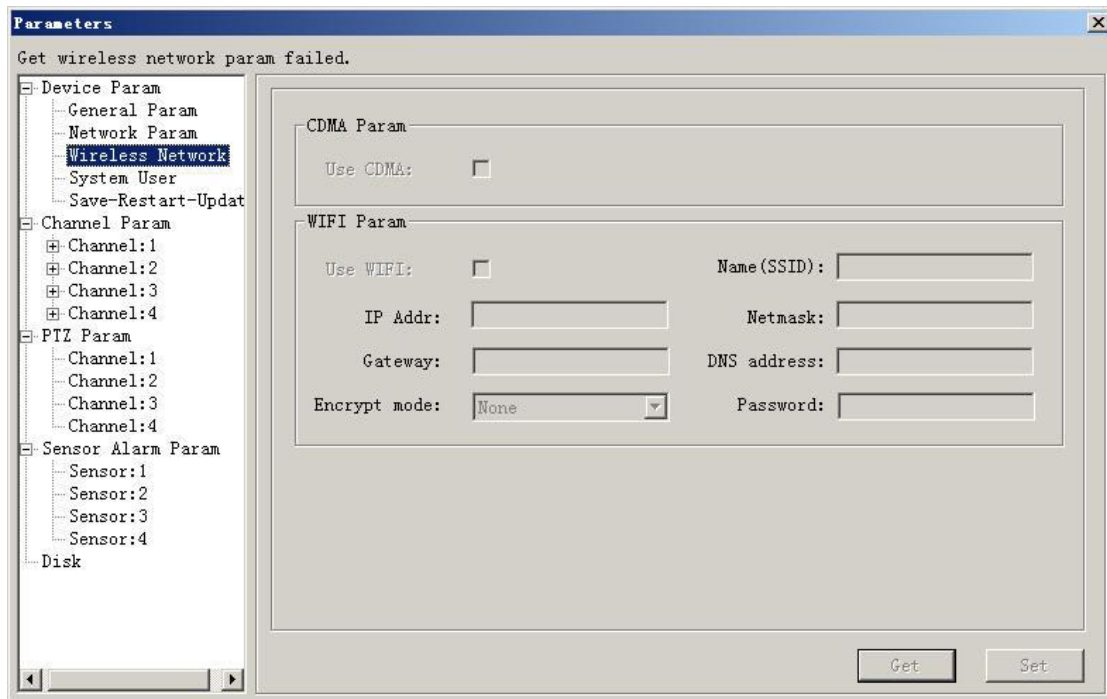

11.1.4 System User


More than one users' Username and password can be set.

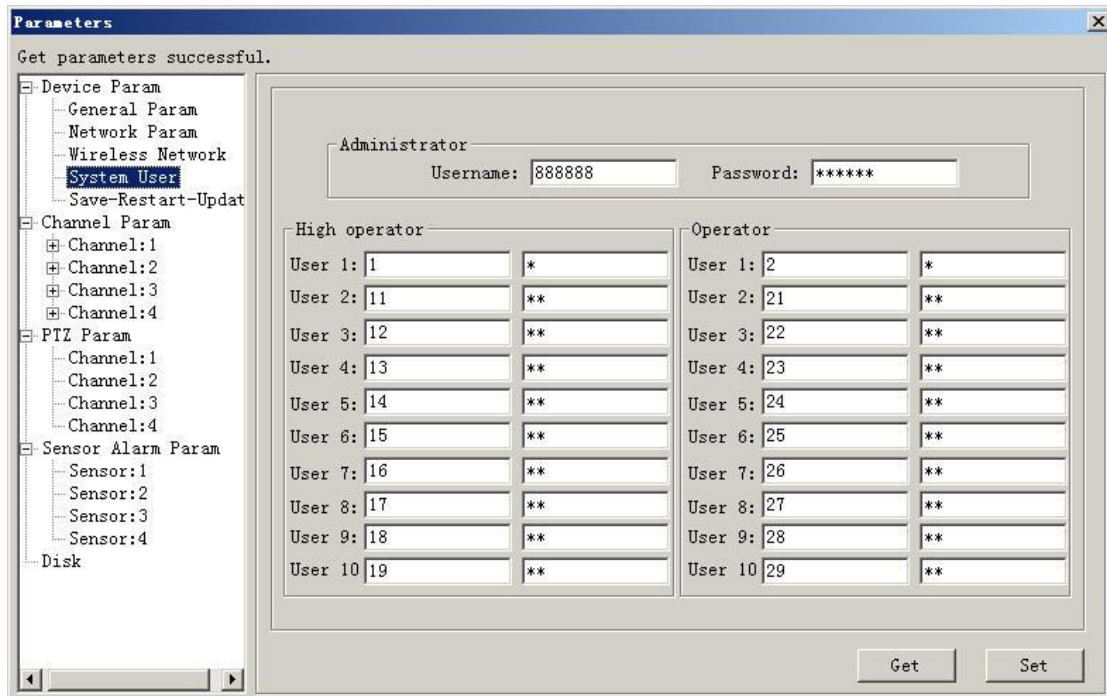


11.1.5 Save-Reboot-Update

The time of network video server and client-side host can be set synchronously. The


function of updating program is to update files with extension name '.itm' into video server.

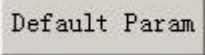Click  to restore the default value of video server parameters from factory.

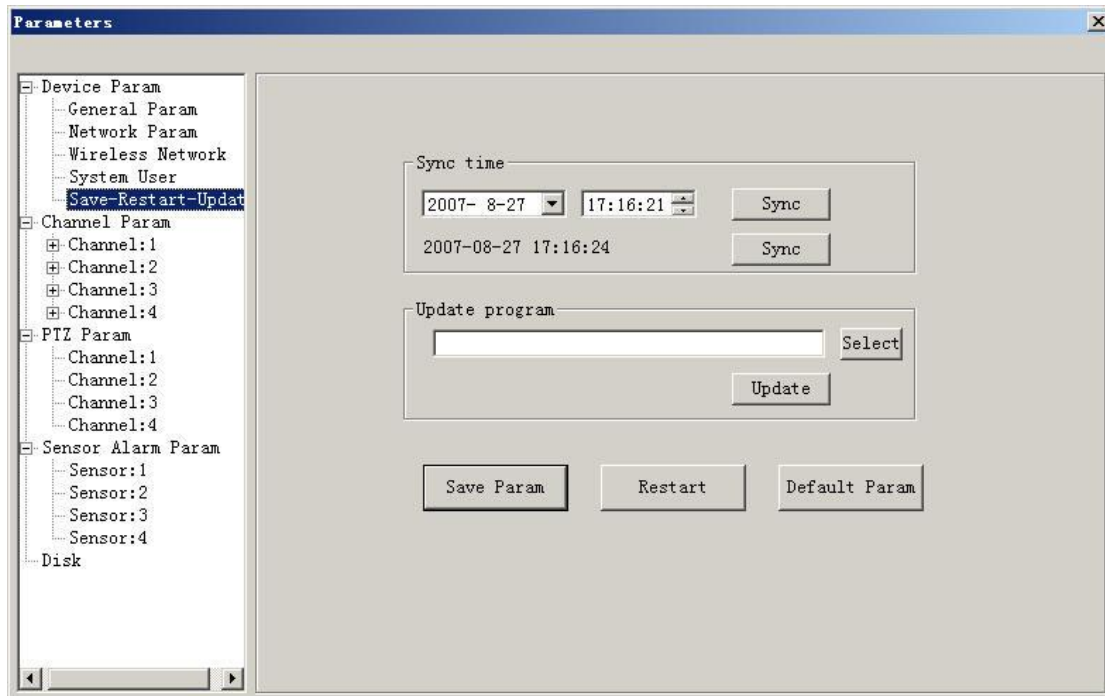


11.2 Channel Parameter Setting

The parameters of every channel can be set independently. For parameters of every channel, there are settings as follows. Here just an example of one channel.

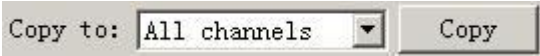Parameter setting option  at right side is a shortcut for setting other channels, which has the same parameters as current channel. It is also applicable in setting of cradle head and alarm probe parameters. In following text, we won't explain it again.

11.2.1 Compression Parameter

Video server use double code flow technology, namely, the compressing parameters of network transmission and remote recording flow can be set separately. See picture as follows:

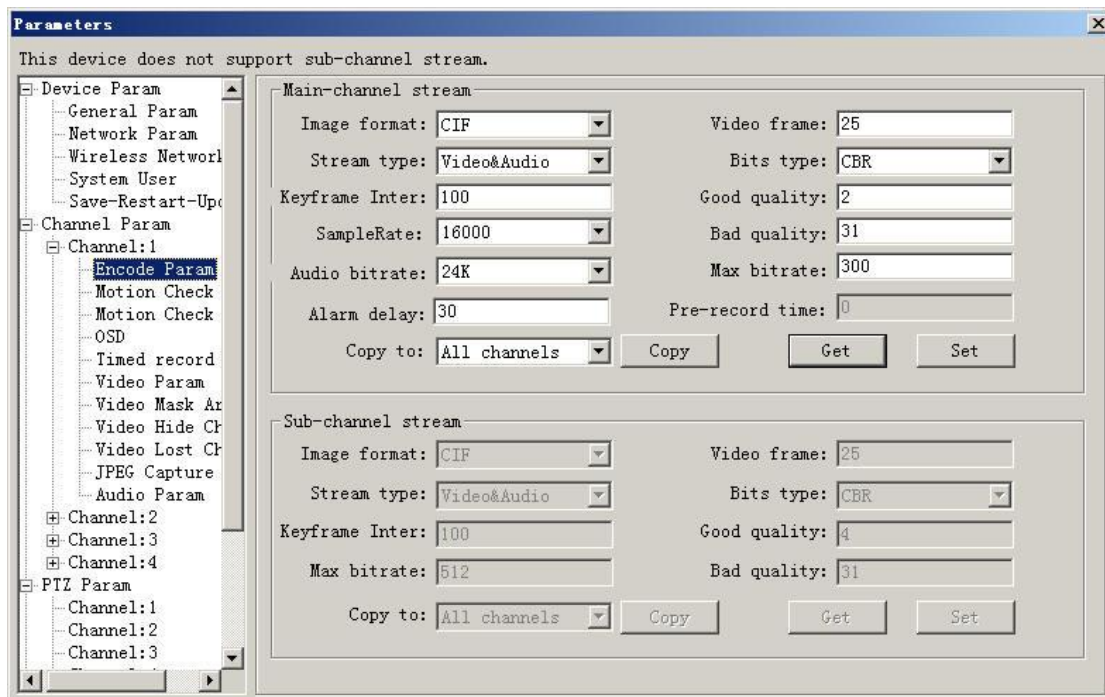

- **Resolution ratio:** it refers to the initial size of zoom image. It is divided into three format: CIF(352×288), 2CIF (704×288) and 4CIF (704×576) . 2CIF is also called HalfD1, and 4CIF is also called FullD1. Our products can support all of the three formats while some only support CIF format, so please distinguish it out from technical parameters of relative products. Meanwhile, the modification on resolution ratio will come into effect only after saving the configuration and restarting video server.
- **Code flow type:** it is divided into combined flow and video flow. Combined flow refers to combined code of audio and video. Under this option both audio and video will be transmitted; if choosing video flow, then there is only video while no audio.
- **Alter code rate and fixed code rate:** Alter coder rate refers that only image quality will be taken into account instead of code rate during coding, i.e., at the cost of sacrificing code rate; fixed code rate refers that according to code rate limitation set by user image quality will be decreased sometimes (eg.: violent motion of images), i.e., at the cost of sacrificing resolution rate. Quality factor coefficient range: 4-31.
- It is recommended that if the belt is wide enough, the quality can be set as 4; if the belt width is limited, please set code rate according to actual belt width.
- **Time delay for alarm:** it is duration time for voice of alarm output if there is alarm.

11.2.2 Mobile Detection

Mobile detection contains two parameters setting: 'mobile detection area' and 'mobile detection time'. Mobile detection function can come into effect only when detection area is partitioned in 'mobile detection area', option Start video move check is selected, and valid period of time is defined.


'Mobile detection area' can make a plan of detection range on monitoring image. It can be a part or the whole monitoring screen. For different environments, detection sensitivities can be set. 'Mobile detection time' can be defined as detection periods individually on seven days in a week.

If you check option Contact channel record: , when alarm of mobile detection happens in this channel, it can trigger channel recording.

If you check option Contact channel capture: , when alarm of mobile detection happens in this channel, it can trigger channel capture.

If you check option Contact alarm out: OUT1 OUT2 OUT3 OUT4, when alarm of mobile detection happens in this channel, alarm output end of video server will output alarm signal.

Click button to save setting after modification.

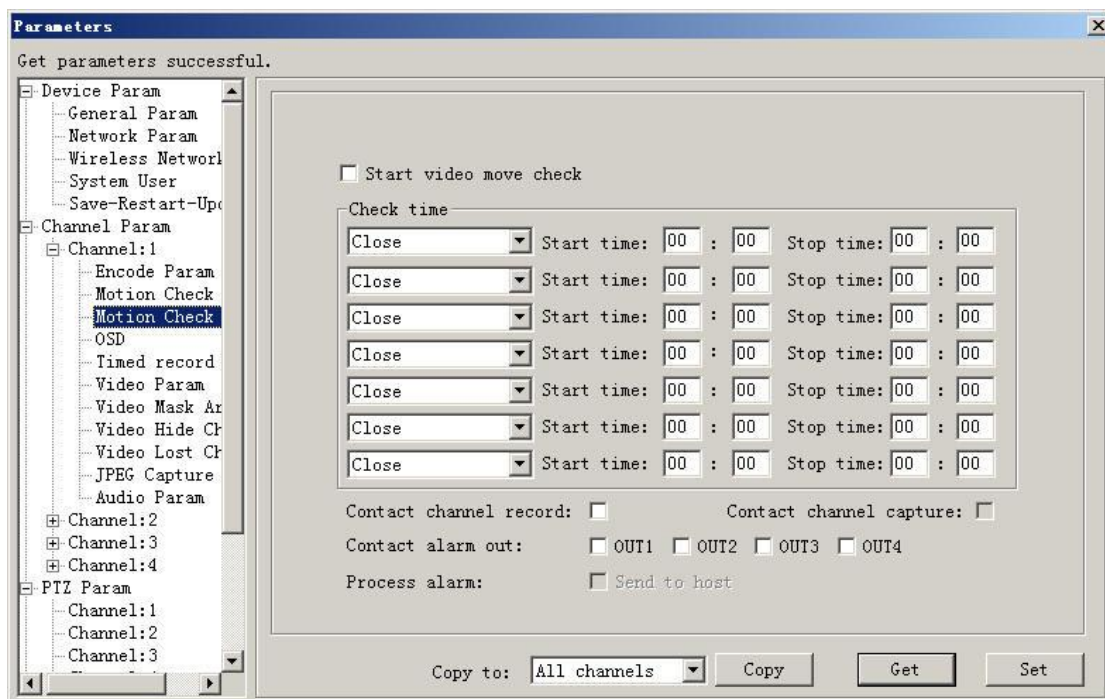


11.2.3 OSD Overlap

OSD overlap function is to set the necessary character information, which is displayed on the monitor screen.

- Check **Bitrate OSD:** , video code rate of current equipment will be displayed dynamically on the monitor screen according to defined coordinate position.


Time display: different formats of date and time can be selected to display; can be positioned.

Title: provide four title to be filled, every title can contains 24 English characters; each can be positioned.

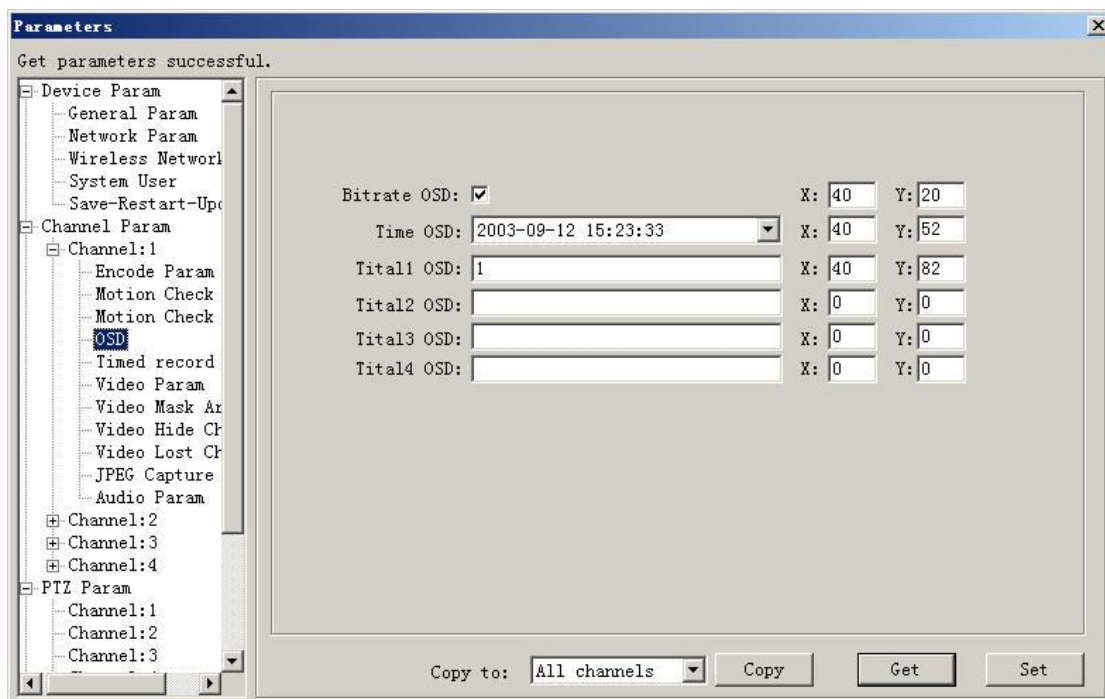


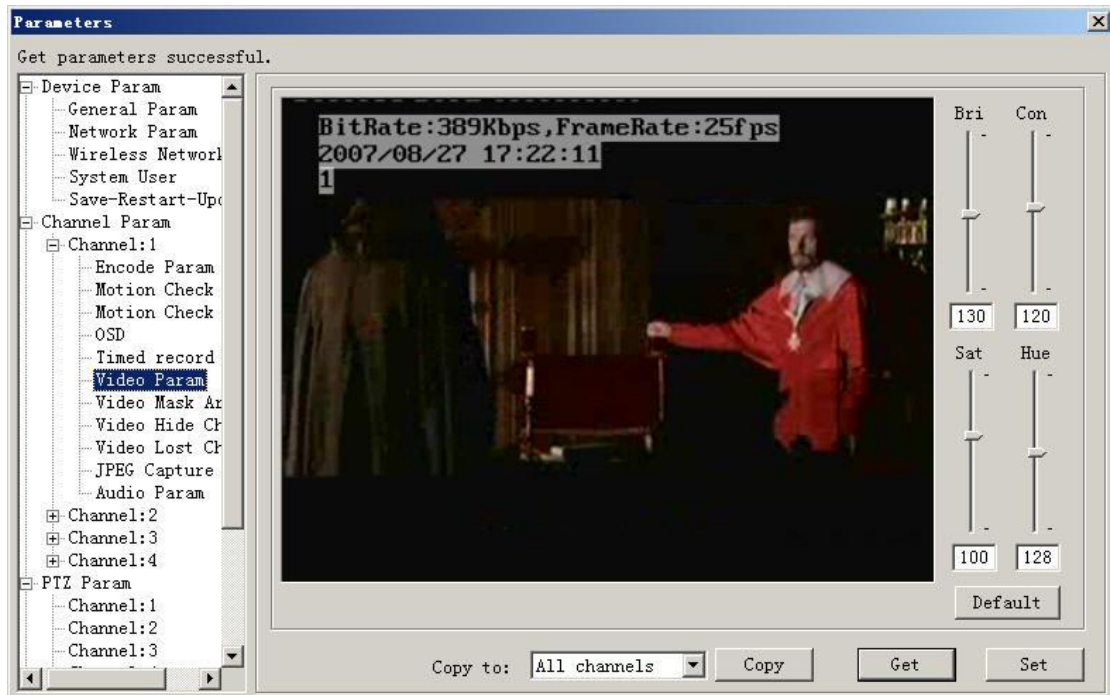
11.2.4 Equipment Recording Plan

Simultaneously checking option **Start timed record** and setting valid period of time can let the setting of timing recording of video server come into effect.

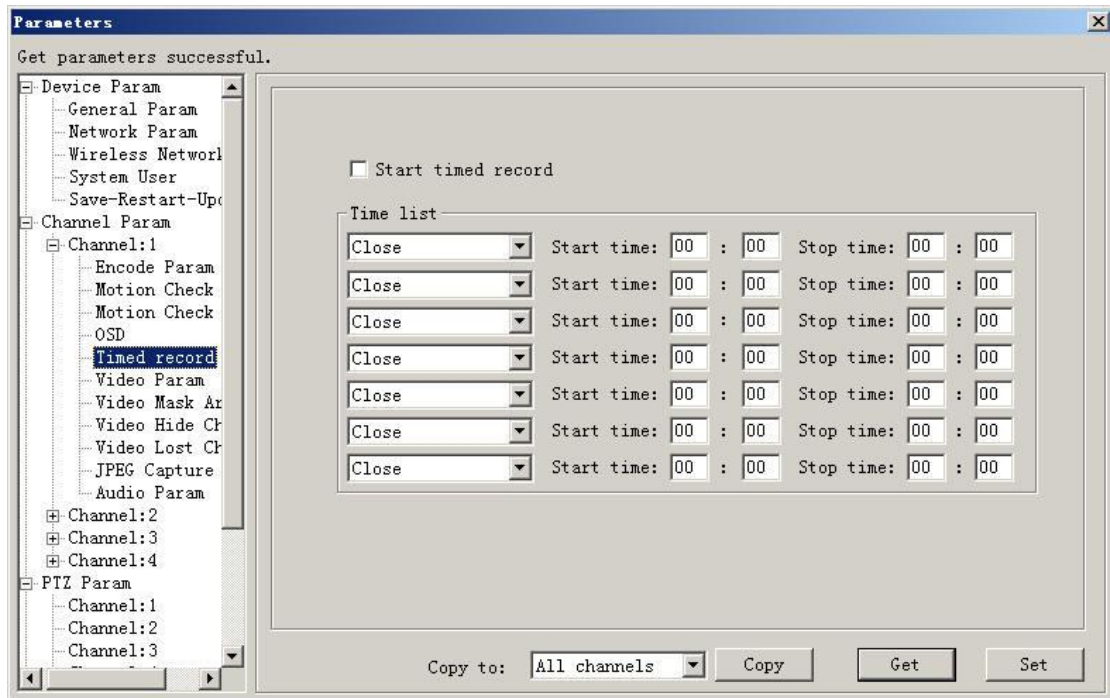

11.2.5 Video Parameter Adjustment

The brightness, contrast, saturation and chroma can be adjusted respectively to reach the optimum performance of image color. To return default value, click  button.




11.2.6 Image Area Masking

This function could be used when part of area in monitor screen needs to be hid.

Click left button of mouse on monitor screen and drag, there will be an area with red frame. The screen of this area will display my contents.


Check Start video mask to let area masking function come into effect.

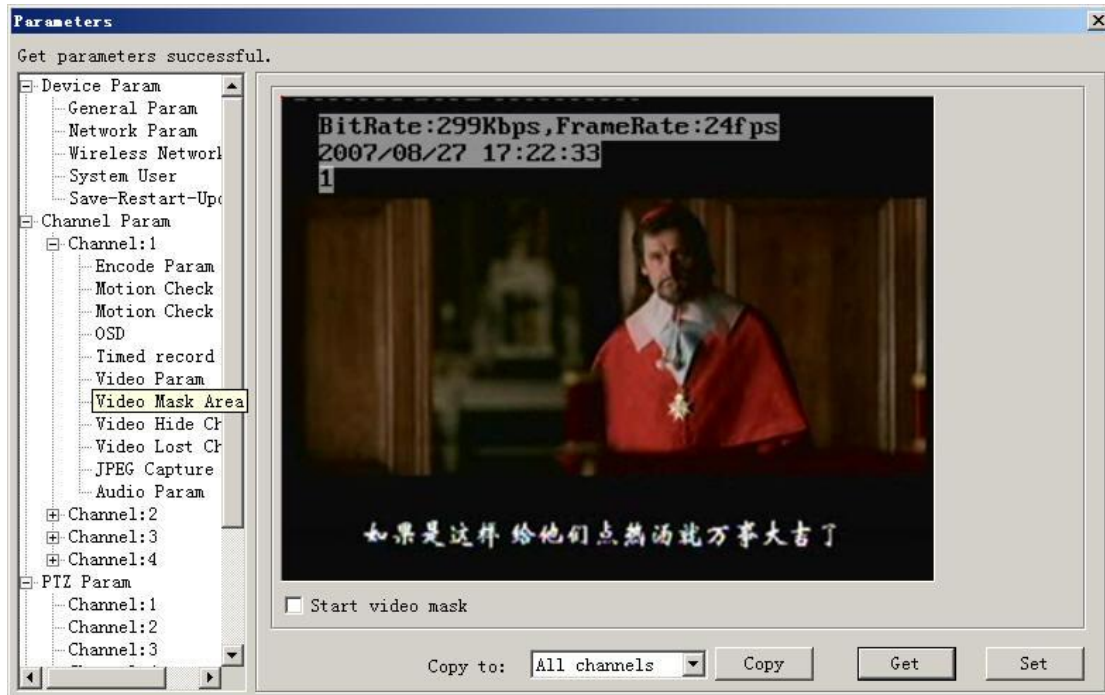

11.2.7 Image Covered Detection

Video server alarm could be triggered when the lens of camera is covered by object.


Simultaneously check Start video hide check and set valid period of time to let image covered detection of video server come into effect.

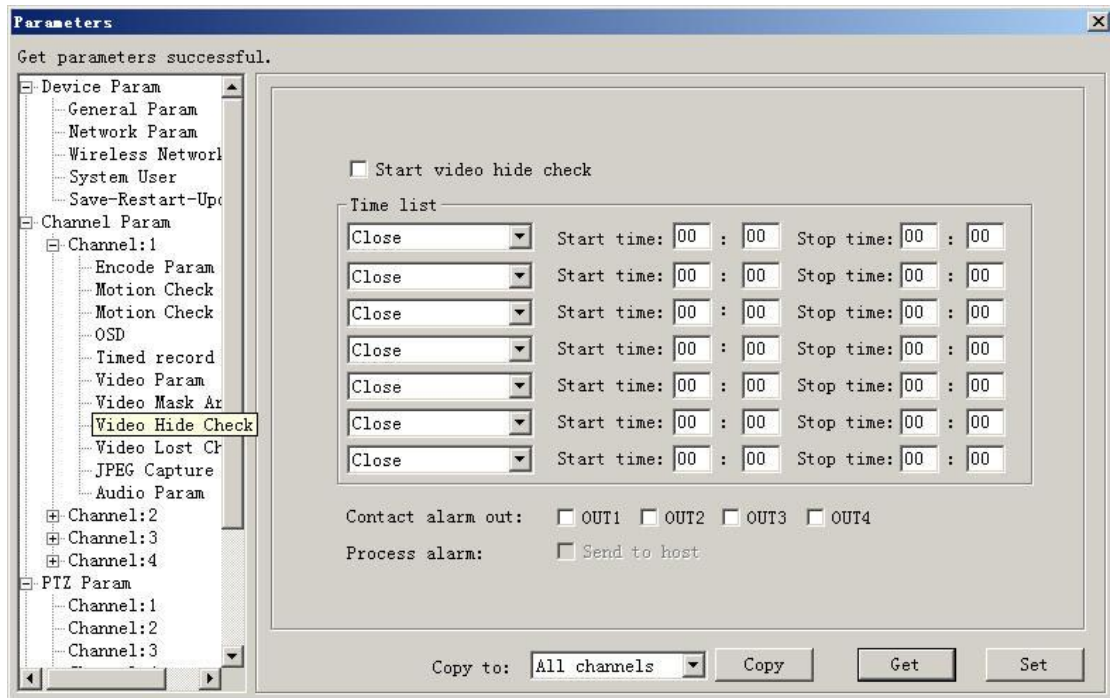

11.2.8 Video Loss Detection

When video service detects on input video signal from front-end camera, it will generate alarm.

Simultaneously check Start video lost check and set valid period of time to let video loss detection of video server come into effect.

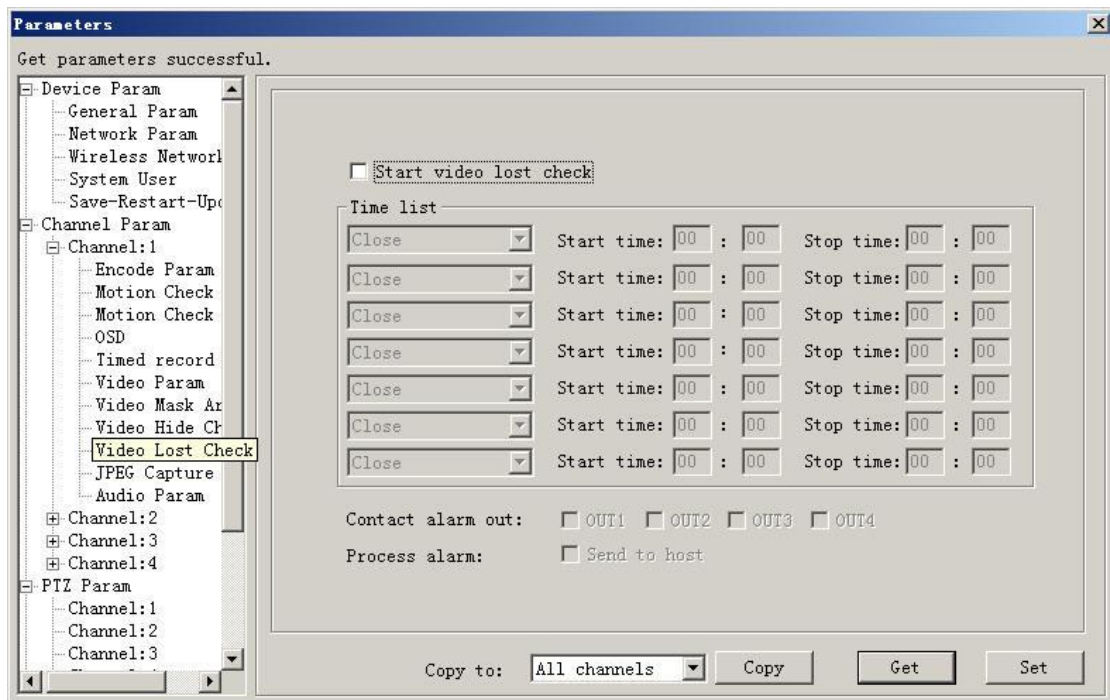

11.2.9 JPEG Capture Parameter


It's the setting for capture function of video server.

Capture quality: input number ranging from 1 to 100 to define the quality of captured image; the bigger the better.

Capture frame rate: the number of captured picture per frame in monitor screen, range from 1 to 5 pages.


Capture format: can choose 4CIF (D1)/2CIF (Half D1)/CIF three image formats.

Capture total number: the total number of captured picture after capture of channel is triggered.

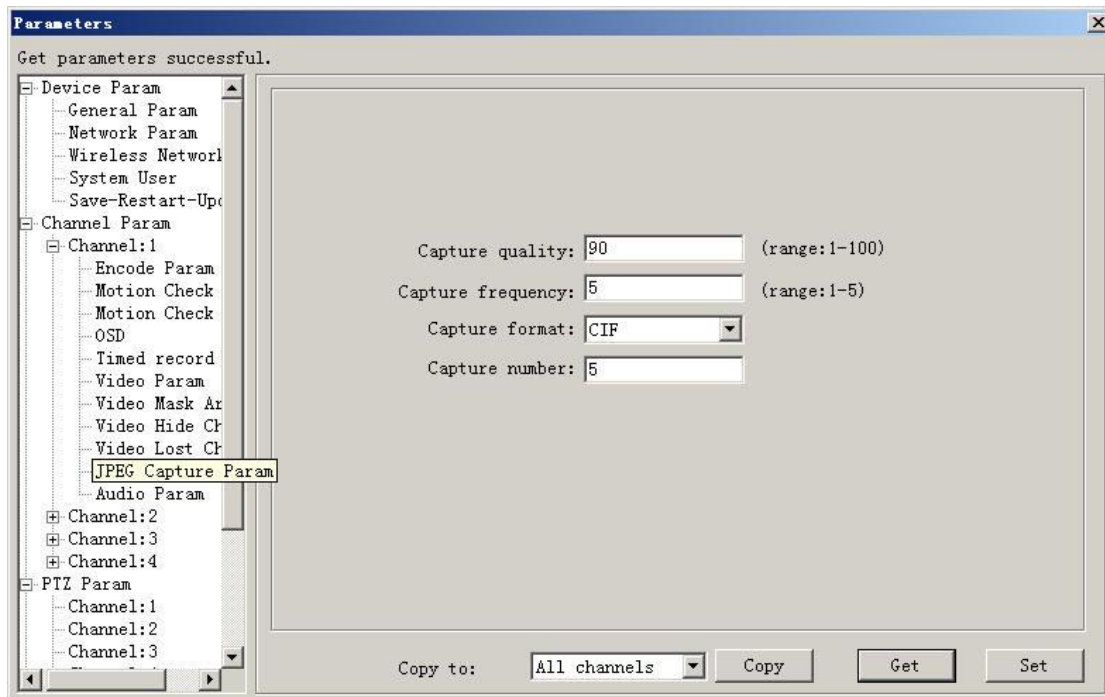

11.3 Cradle Head Parameter Setting

Set serial-port control parameters of every channel respectively, and upgrade protocol for cradle head. Upgrading files for cradle head will be provided by supplier. See as following picture:

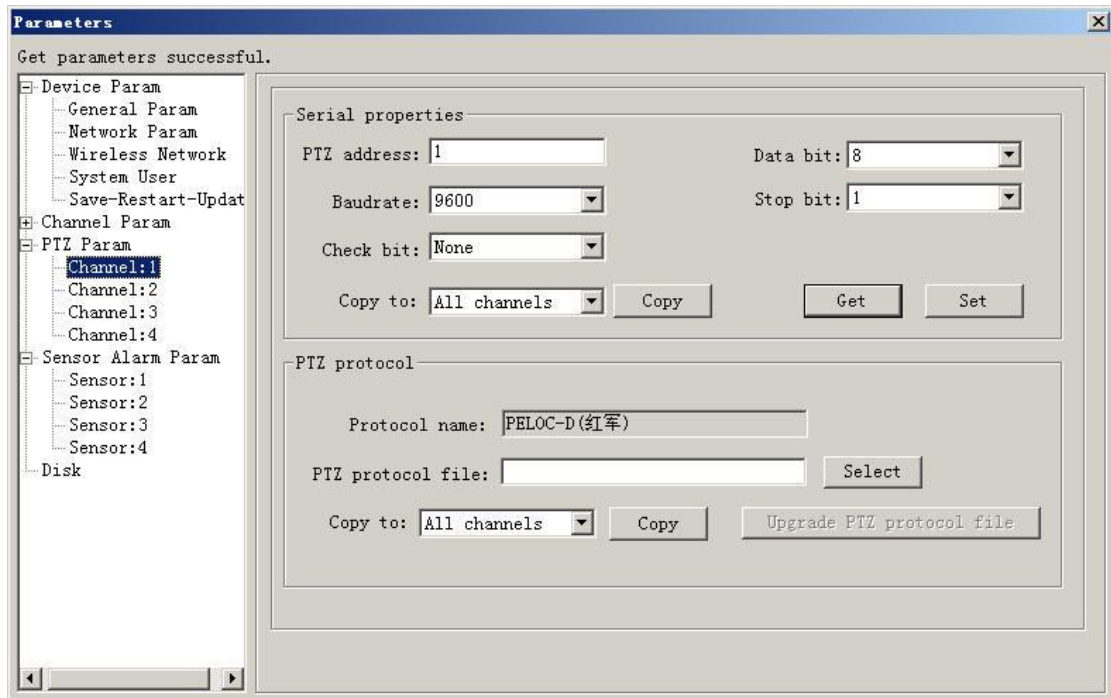

In actual application, video-server-controlled cradle camera should has parameters as follows: The first, update correct protocol updating files, which are provided by factory or supplier, into video server. The second: Baud rate of video server and cradle head decoder should be consistent. The third: The address of cradle head in video server should be consistent with the one of cradle head decoder.

11.4 Alarm Probe Parameter Setting


As required you can open/close alarm, set alarm time, linkage recording, and preset sites.

You should know the alarm mode of the probe before setting, select




Simultaneously check and set valid defense organization period of time to let the alarm setting of video server probe come into effect.

When probe alarms, it can trigger functions of corresponding channel like recording, capture, alarm output, preset site invoking, etc.

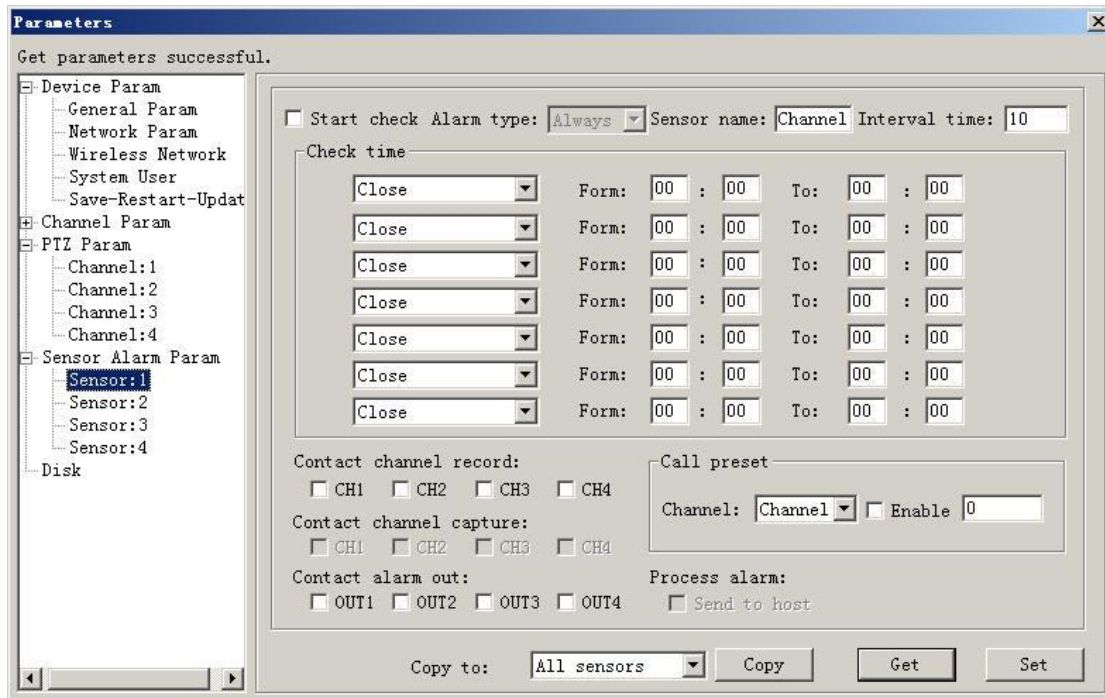

11.5 Equipment Hard Disk

Be able to check the type, total capacity and total spare space of built-in HD. And be able to format HD. Note, when video server has no build-in or external HD,

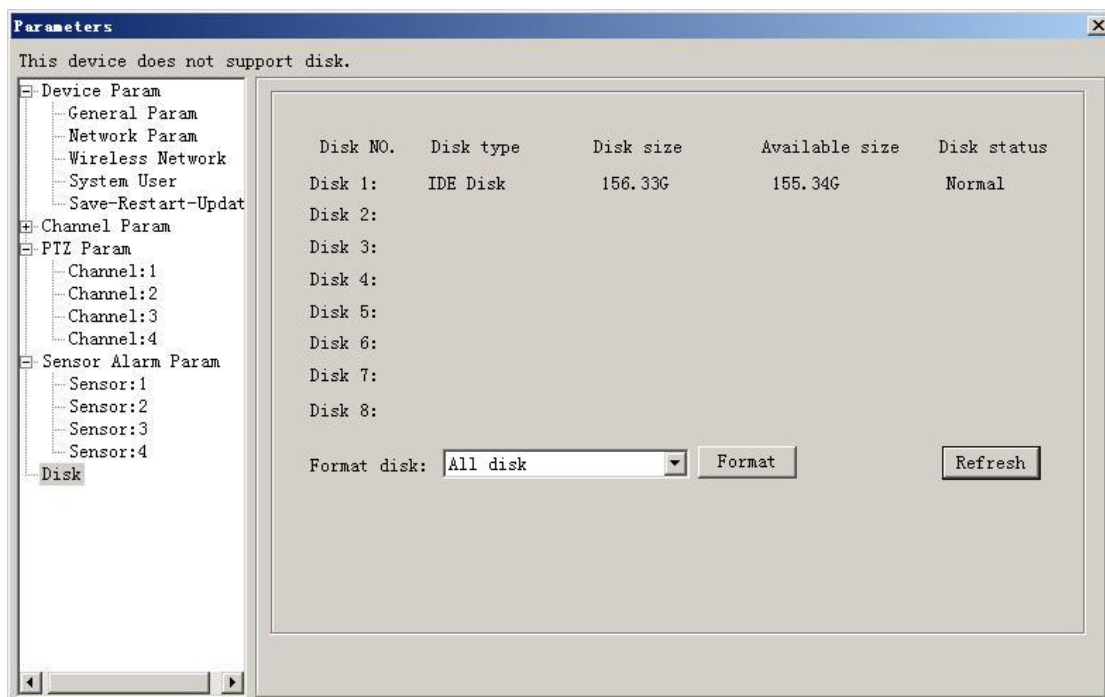

Thank you for using ImagineWorldClient centralized management software. Please contact with the manufacturer for the function differences from this Instruction caused by software upgrading. We are quite sorry that we couldn't inform you these modifications in time.