



MODEL NUMBER: SG1911-1-1-GB-XX

IMPROX SUPAGATE

ImproX SupaGate 4-Channel Controller INSTALLATION MANUAL

SPECIFICATIONS

Working Environment	The SupaGate is designed to work in an indoor or protected outdoor environment similar to IP20. The SupaGate is, therefore, NOT sealed against water.	
Passive Frequency	125 kHz.	
RF Frequency	433.92 MHz.	
Security	ImproX DCT, Dynamic Code Transmission Technology.	
Input Voltage	10 V DC to 14 V DC.	
Power Requirements	Current (mA)	Power (W)
Input Voltage 12 V DC, 1 Antenna Reader, all Relays OFF	60	0.72
Input Voltage 12 V DC, 1 Antenna Reader, all Relays ON.....	220	2.64
Relays		
Relay Output	4 Relays, each with NO, COM and NC contacts.	
Relay Contact Ratings	10 A at 28 V DC, 5 A at 220 V AC.	
Installer Interfaces		
LED Indicators		
7-Segment Display	2 Displays, Red (externally visible).	
Push-buttons.....	4 Push-buttons (externally accessible).	

INSTALLATION INFORMATION

Accessories

Find the following when unpacking the SupaGate Controller:

- A SupaGate housed in a Black tinted, Polycarbonate Plastic Cabinet. The SupaGate consists of a 2-piece Top Cover and a Base.

CAUTION: DO NOT use the Metal-oxide Varistors (25 Vrms, 500 A, 77 V max clamping) with mains power applications.

- Four Metal-Oxide Varistors, 25 Vrms, 500 A, 77 V max clamping.
- Four Black tinted, Polycarbonate Plastic Standoffs.
- Two Brass Wood Screws (3.50 mm x 25 mm).
- Two Wall Plugs (7 mm).
- An extra Serial Number Label.

General

Remember the following when installing the SupaGate:

Read Range

CAUTION: The SupaGate is susceptible to excessive RF interference, reducing the range. Always site test the SupaGate, prior to installation, in its installation location for optimum RF read range.

- The SupaGate has a tested RF read range of between 10 m to 30 m (11 yd to 33 yd) when used with the ImproX QT (XQT904-1-1-GB-XX).
- The passive read range varies from between 25 mm to 76 mm (1 in to 3 in) depending on the Antenna Reader and Tag used.

Antenna Reader Distance

The ideal cable distance between the SupaGate and its Antenna Reader ranges between 2 m to 16 m (7 ft to 53 ft). Achieve this by using good quality screened, twisted pair cable.

Distance between Antenna Readers from DIFFERENT SupaGates

To avoid mutual interference, install the Antenna Readers alongside each other at least 500 mm (20 in) apart.

Default Relay Selection

- For passive Tags presented to Antenna Reader 1, Relay 1 is automatically selected.
- When using the Normal (4-Digit) PIN-code, if you enter the PIN-code on Antenna Reader 1, Relay 1 is automatically selected.
- Buttons 1 to 4 on the ImproX (QT) Quad Transmitter activate Relays 1 to 4 on the SupaGate Controller. If only Buttons 1 and 2 are pressed during the "Add RF Tags" procedure then only those Buttons will activate the relevant Relays. Buttons 3 and 4 will have no action. Any combination is available. See Figure 1 for Button locations.



QT Button Locations.jpg

Figure 1: Button Configuration for ImproX (QT) Quad Transmitter Programmed in “Dynamic Code Transmission Mode”

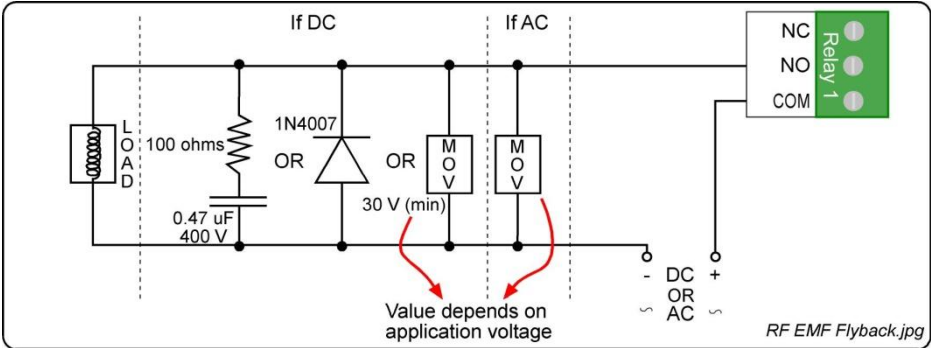
- The ImproX (QT) Quad Transmitter has its own passive Tag, separate from the transmitted codes. Presenting the ImproX (QT) Quad Transmitter passive Tag to Antenna Reader 1 drives Relay 1.

	Relay 1	Relay 2	Relay 3	Relay 4
Quad Transmitter	Button 1	Button 2	Button 3	Button 4
Passive Tag	Antenna Reader 1	-	-	-
4-Digit PIN-code	Antenna Reader 1	-	-	-
5-Digit PIN-code (Antenna Reader 1)	PIN XXXX1	PIN XXXX2	PIN XXXX3	PIN XXXX4
Request to Exit (RTE) Input	RTE Door 1	RTE Door 2	-	-

Table 1: Relay Allocation Summary

Arc Suppression

Snubber devices are recommended for EMF Flyback and Arc Suppression when driving an inductive load with the Relay, see Figure 2.



RF EMF Flyback.jpg

Figure 2: EMF Flyback and Arc Suppression

MOUNTING THE SUPAGATE

CAUTION: DO NOT mount the Controller on or close to a metal surface.

CAUTION: Mount the SupaGate in a suitable indoor location, or protected outdoor location. Mounting the SupaGate in a location unprotected against rain will damage the SupaGate Controller.

CAUTION: Make certain that you mount the Controller on a vibration-free surface.

NOTE: If you intend mounting the SupaGate on a damp wall, use the supplied standoffs to position the SupaGate away from the wall.

NOTE: Test the SupaGate, in the proposed installation location before mounting in position, ensuring the read range meets your needs.

For best performance, position the Controller for clear line-of-sight in the direction of the movement. The antenna should be in the vertical plane.

In Figure 3, a Tag moving along Motion 1 will be in line-of-sight of the antenna throughout the 10 m distance from first detection to the Controller. However, a Tag moving along Motion 02 will move out of line-of-sight of the antenna once it reaches Point A in Figure 3.

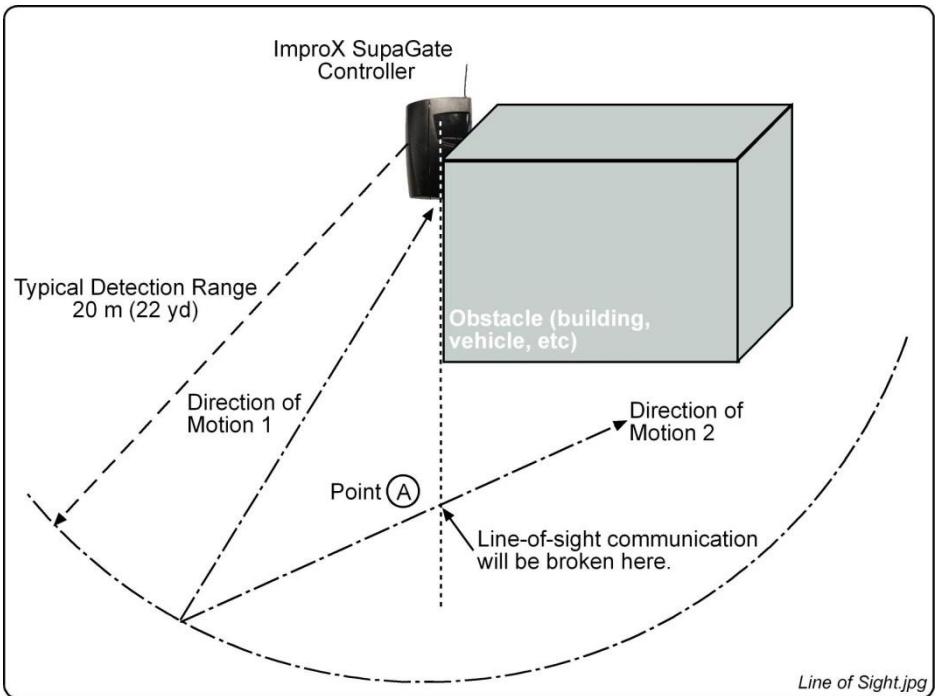


Figure 3: Line of Sight Communication

1. After removing the SupaGate from its packaging, straighten the flexible Antenna, this ensures an improved RF read range.
2. Position the SupaGate in clear line-of-sight, preferably 1.50 m to 2 m (5 ft to 6 ft) above the ground, in the direction of movement, with the Antenna vertical.
3. Secure the Cabinet to the mounting surface, using two suitable screws and wall plugs (supplied) nuts and bolts or rivets.

CONNECTING THE SUPAGATE

Figure 4 shows the layout of the SupaGate.

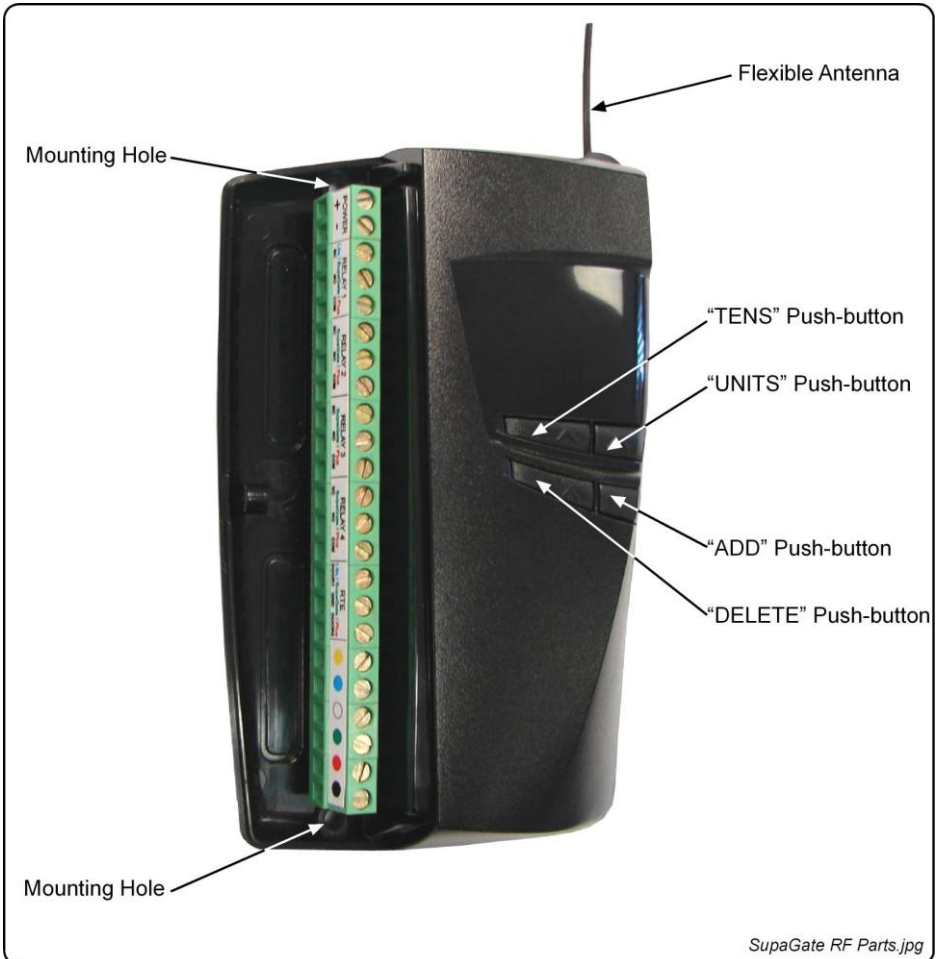


Figure 4: SupaGate Layout

Figure 5 shows a typical connection diagram for the SupaGate.

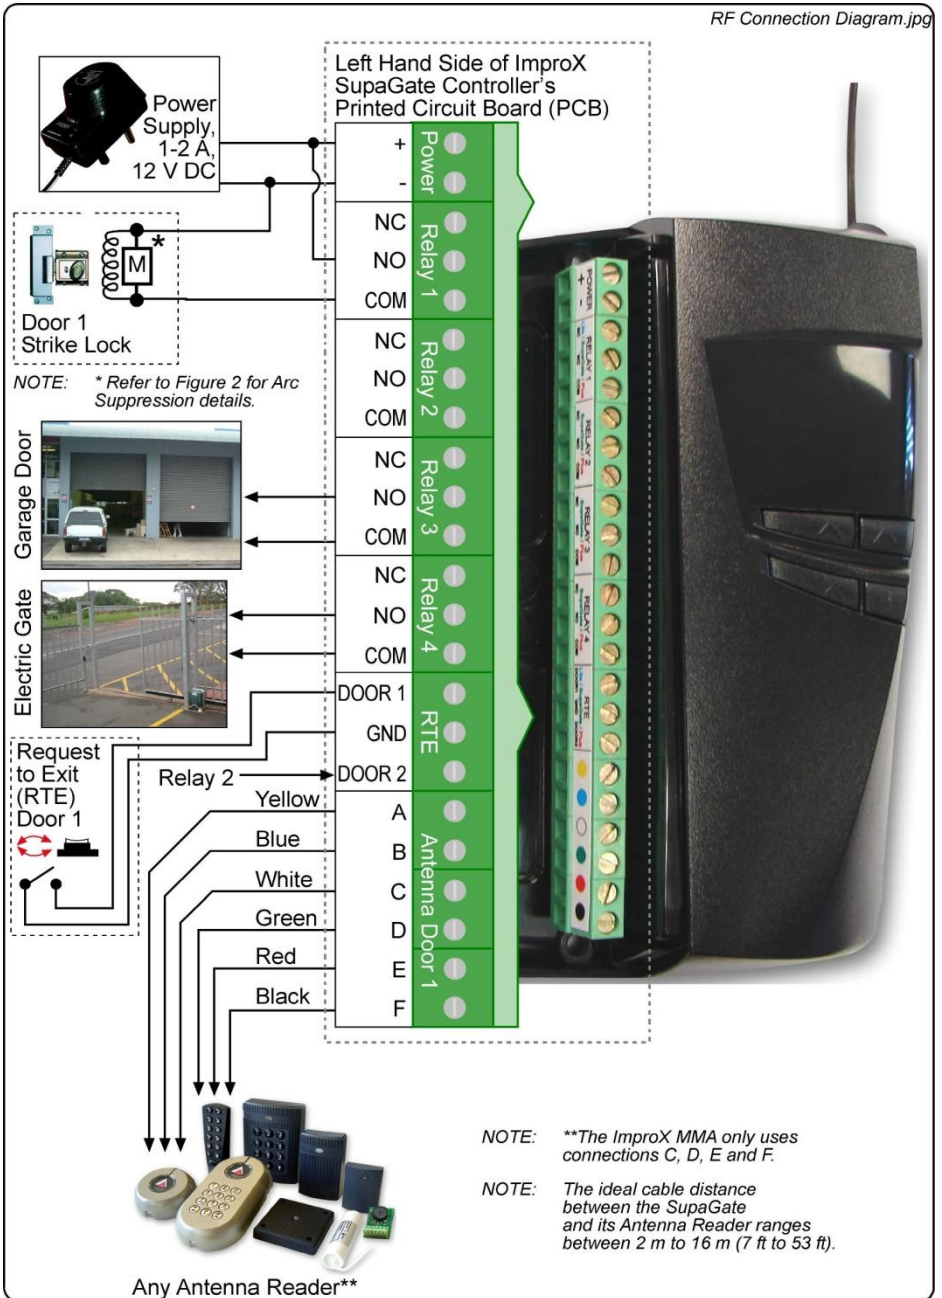


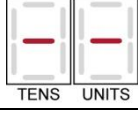

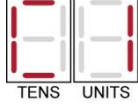
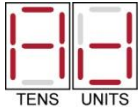
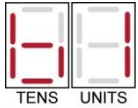


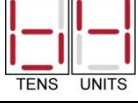

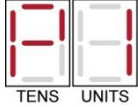


Figure 5: Typical SupaGate Electrical Connections

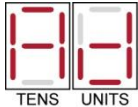
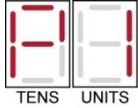
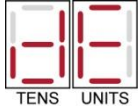
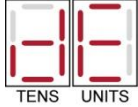
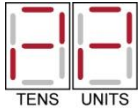
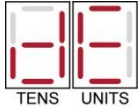
USER INFORMATION

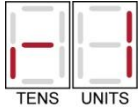
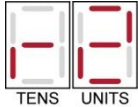
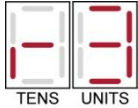
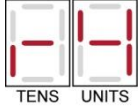
Mode and Action	7-Segment Display LED	
	Displays	Display Duration
POWER-UP		2 seconds then enters Run Mode
RUN MODE Reading Tags		Rotates in a circular manner
Unknown Tag		2 seconds
Tag Found	Displays the Tag Memory Location (01-99)	2 seconds
PROGRAMMING MODE Adding Passive Tags <ol style="list-style-type: none"> In Run Mode press the "ADD" Push-button for less than 1 second. Press the "TENS" and "UNITS" Push-buttons until the desired Tag Location is shown. Present the Passive Tag to the Antenna Reader. Press "ADD" to return to Run Mode. NOTES: <ul style="list-style-type: none"> Each new Tag Code received will display the Location at which it is being added. If the Tag already exists, it will be deleted and re-added in the same location. 		1 second
	Displays the first free Location (01-99)	2 seconds
	Displays the Passive Tag (Card) Location number as follows:	
		

Blank Space

Mode and Action	7-Segment Display LED		
	Displays	Display Duration	
Adding RF Tags <ol style="list-style-type: none"> In Run Mode press the “ADD” Push-button for less than 1 second. Press the “TENS” and “UNITS” Push-buttons until the desired Tag Location is shown. Press only the Buttons on the ImproX (QT) Quad Transmitter that are required to be allowed. Press “ADD” to return to Run Mode. <p>NOTES:</p> <ul style="list-style-type: none"> Each new Tag Code received will display the Location at which it is being added. If the Tag already exists, it will be deleted and re-added in the same location. 		1 second	
	Displays the first free Location (01-99)	2 seconds	
	Displays the Button Number as follows:	   	
Adding Normal (4-Digit) PIN-codes <ol style="list-style-type: none"> In Run Mode press the “ADD” Push-button for less than 1 second. Press the “TENS” and “UNITS” Push-buttons until the desired Tag Location is shown. Enter your 4-digit PIN-code on the Keypad Antenna Reader, followed by the “#” Key on the Keypad Antenna Reader. Press “ADD” to return to Run Mode. <p>NOTE: Ensure you enter the complete 4-digit code, followed by the “#” Key to gain entry.</p>		1 second	
	Displays the first free Location (01-99)	2 seconds	
	Displays the PIN-code as follows:		

Blank Space

Mode and Action	7-Segment Display LED	
	Displays	Display Duration
<p>Adding Special (5-Digit) PIN-codes</p> <p>The PIN-code entered activates only the Relay specified as the 5th digit of the PIN-code.</p> <ol style="list-style-type: none"> In Run Mode press the “ADD” Push-button for less than 1 second. Press the “TENS” and “UNITS” Push-buttons until the desired Tag Location is shown. Enter your 4-digit PIN-code on the Keypad Antenna Reader, followed by a 1-digit reference to the Relay you want to activate. Press the “#” Key on the Keypad Antenna Reader to complete the entry. Press “ADD” to return to Run Mode. <p><i>NOTE: Ensure you enter the complete 5-digit code, followed by the “#” Key to gain entry.</i></p>		1 second
	Displays the first free Location (01-99)	2 seconds
	Displays the PIN-code as follows:	
		
<p>Deleting Tags or PIN-codes</p> <ol style="list-style-type: none"> In Run Mode press the “DELETE” Push-button. Press the “TENS” and “UNITS” Push-buttons until the desired Tag Location is shown. Press “DELETE” to delete the desired Location. Specify more Locations to be deleted, or press “DELETE” to return to Run Mode. 		1 second
		2 seconds
		
<p>Bulk Delete</p> <ol style="list-style-type: none"> Power down the SupaGate. Power up the SupaGate while simultaneously pressing the “ADD” and “DELETE” Push-buttons. “??” is displayed, after 2 seconds all is deleted and “dE” is displayed. 		
		

Mode and Action	7-Segment Display LED	
	Displays	Display Duration
Replacing Lost Tags <ol style="list-style-type: none"> Delete the lost Tag from its Tag Location. (See the “Deleting Tags” section). Add the new Tag to the abovementioned Tag Location. (See the relevant “Adding Tags” section). 	Displays the first free Location (01-99) ----- Displays selected Tag Memory Location	2 seconds
Set Relay Durations <ol style="list-style-type: none"> In Run Mode press the “ADD” Push-button for longer than 1 second. Press the “TENS” and “UNITS” Push-buttons to specify the duration of Relay 1 in seconds (00 = Toggled Mode). <p><i>NOTE: The factory default setting is 01.</i></p>	 TENS UNITS ----- Displays the Relay Drive Time in seconds (01–99 seconds)	1 second
<ol style="list-style-type: none"> Press the “ADD” Push-button for less than 1 second. Press the “TENS” and “UNITS” Push-buttons to specify the duration of Relay 2 in seconds (00 = Toggled Mode). <p><i>NOTE: The factory default setting is 01.</i></p>	 TENS UNITS ----- Displays the Relay Drive Time in seconds (01–99 seconds)	1 second
<ol style="list-style-type: none"> Press the “ADD” Push-button for less than 1 second. Press the “TENS” and “UNITS” Push-buttons to specify the duration of Relay 3 in seconds (00 = Toggled Mode). <p><i>NOTE: The factory default setting is 01.</i></p>	 TENS UNITS ----- Displays the Relay Drive Time in seconds (01–99 seconds)	1 second
<ol style="list-style-type: none"> Press the “ADD” Push-button for less than 1 second. Press the “TENS” and “UNITS” Push-buttons to specify the duration of Relay 4 in seconds (00 = Toggled Mode). <p><i>NOTE: The factory default setting is 01.</i></p>	 TENS UNITS ----- Displays the Relay Drive Time in seconds (01–99 seconds)	1 second
<ol style="list-style-type: none"> Press “ADD” for less than 1 second to go back to Run Mode. 		

COMPLICATED CONCEPTS

- If the Tag + PIN-code function is required, then register a Tag at Antenna Reader 1 and a 5-digit PIN-code specifying Relay 2. Relays 1 and 2 can then be wired in series. Appropriate Relay durations need to be chosen.
- If the incorrect PIN-code is entered 3 times in succession, the Keypad locks for 20 seconds. During this period the RF System remains operational.
- If you select Button 1 on the ImproX (QT) Quad Transmitter to activate Relay 1, presenting the ImproX (QT) Quad Transmitters passive Tag to Antenna Reader 1 automatically activates Relay 1. This will only utilize 1 of your 99 Locations.

Blank Space

TAG LOCATIONS

Document all Tag owners at their respective Tag Memory Locations (in the SupaGate) using Table 2. This list provides an easy reference when you need to delete Tags from the SupaGate.

Owner		Relay or PIN-code					Owner		Relay or PIN-code				
		1	2	3	4	5/R			1	2	3	4	5/R
01							27						
02							28						
03							29						
04							30						
05							31						
06							32						
07							33						
08							34						
09							35						
10							36						
11							37						
12							38						
13							39						
14							40						
15							41						
16							42						
17							43						
18							44						
19							45						
20							46						
21							47						
22							48						
23							49						
24							50						
25							51						
26							52						

Owner		Relay or PIN-code					Owner		Relay or PIN-code				
		1	2	3	4	5/R			1	2	3	4	5/R
53							77						
54							78						
55							79						
56							80						
57							81						
58							82						
59							83						
60							84						
61							85						
62							86						
63							87						
64							88						
65							89						
66							90						
67							91						
68							92						
69							93						
70							94						
71							95						
72							96						
73							97						
74							98						
75							99						
76													

Table 2: Tag Location Table

Blank Space

GUARANTEE OR WARRANTY

CAUTION: We reserve the right to nullify the products guarantee or warranty where you have not properly installed the Metal-oxide Varistors.

This product conforms to our Guarantee or Warranty details placed on our Web Site to read further please go to www.impro.net.

USER NOTES

USER NOTES



This manual is applicable to the ImproX SupaGate 4-Channel Controller,
SGI911-1-1-GB-01.

(The last two digits of the stock code indicate the issue status of the product).

SGI300-0-0-GB-08

Issue 09

Apr 2008

ImproX SupaGate\English Manuals\LATEST
ISSUE\XSupGate-inism-en-09.docx